



An **Allied Motion Company**

User's Manual Pub. 0300231-06 Rev. A

# 1794 8-Channel Isolated Universal Input Module

Catalog Number: 1794sc-IF8IU



SILVER  
Technology Partner  
A ROCKWELL AUTOMATION PARTNER

## Important Notes

1. Please read all the information in this owner's guide before installing the product.
2. The information in this owner's guide applies to hardware Series A and firmware version 1.0 or later.
3. This guide assumes that the reader has a full working knowledge of the relevant processor.

### Notice

The products and services described in this owner's guide are useful in a wide variety of applications. Therefore, the user and others responsible for applying the products and services described herein are responsible for determining their acceptability for each application. While efforts have been made to provide accurate information within this owner's guide, Spectrum Controls, Inc. assumes no responsibility for the accuracy, completeness, or usefulness of the information herein.

Under no circumstances will Spectrum Controls, Inc. be responsible or liable for any damages or losses, including indirect or consequential damages or losses, arising out of either the use of any information within this owner's guide or the use of any product or service referenced herein.

No patent liability is assumed by Spectrum Controls, Inc. with respect to the use of any of the information, products, circuits, programming, or services referenced herein.

The information in this owner's guide is subject to change without notice.

### Limited Warranty

Spectrum Controls, Inc. warrants that its products are free from defects in material and workmanship under normal use and service, as described in Spectrum Controls, Inc. literature covering this product, for a period of 1 year. The obligations of Spectrum Controls, Inc. under this warranty are limited to replacing or repairing, at its option, at its factory or facility, any product which shall, in the applicable period after shipment, be returned to the Spectrum Controls, Inc. facility, transportation charges prepaid, and which after examination is determined, to the satisfaction of Spectrum Controls, Inc., to be thus defective.

This warranty shall not apply to any such equipment which shall have been repaired or altered except by Spectrum Controls, Inc. or which shall have been subject to misuse, neglect, or accident. In no case, shall the liability of Spectrum Controls, Inc. exceed the purchase price. The aforementioned provisions do not extend the original warranty period of any product which has either been repaired or replaced by Spectrum Controls, Inc.

# Table of Contents

<b>IMPORTANT NOTES .....</b>	<b>II</b>
<b>CHAPTER 1 MODULE OVERVIEW.....</b>	<b>1-1</b>
SECTION 1.1 GENERAL DESCRIPTION .....	1-1
SECTION 1.2 INPUT TYPES AND RANGES .....	1-1
SECTION 1.3 DATA FORMATS.....	1-2
SECTION 1.4 FILTER FREQUENCIES.....	1-3
SECTION 1.5 HARDWARE FEATURES.....	1-3
SECTION 1.6 SYSTEM OVERVIEW .....	1-4
<i>1.6.1 Module Power-up.....</i>	<i>1-4</i>
SECTION 1.7 MODULE OPERATION .....	1-4
<b>CHAPTER 2 INSTALLATION AND WIRING .....</b>	<b>2-1</b>
SECTION 2.1 COMPLIANCE TO EUROPEAN UNION DIRECTIVES .....	2-1
<i>2.1.1 EMC Directive.....</i>	<i>2-1</i>
<i>2.1.2 ATEX Directive .....</i>	<i>2-1</i>
SECTION 2.2 GENERAL CONSIDERATIONS.....	2-2
<i>2.2.1 Hazardous Location Considerations.....</i>	<i>2-2</i>
<i>2.2.2 Prevent Electrostatic Discharge .....</i>	<i>2-3</i>
<i>2.2.3 Remove Power .....</i>	<i>2-3</i>
<i>2.2.4 Selecting a Location .....</i>	<i>2-3</i>
SECTION 2.3 POWER REQUIREMENTS.....	2-4
<i>2.3.1 Wiring the Terminal Base Units (1794-TB3G shown).....</i>	<i>2-4</i>
SECTION 2.4 INSTALLING THE MODULE .....	2-6
<i>2.4.1 Mounting the Terminal Base Unit on a DIN Rail.....</i>	<i>2-6</i>
<i>2.4.2 Panel/Wall Mounting .....</i>	<i>2-8</i>
<i>2.4.3 Mounting the IF8IU Module on the Terminal Base Unit .....</i>	<i>2-10</i>
SECTION 2.5 FIELD WIRING CONNECTIONS .....	2-11
<i>2.5.1 Field Wiring using a 1794-TB3G and TB3GS Terminal Base .....</i>	<i>2-11</i>
SECTION 2.6 MODULE INDICATORS .....	2-18
<b>CHAPTER 3 CONFIGURING THE 1794SC-IF8IU USING RSLOGIX 5000.....</b>	<b>3-1</b>
SECTION 3.1 ABOUT THIS CHAPTER .....	3-1
SECTION 3.2 MODULE MEMORY MAP.....	3-1
SECTION 3.3 CONFIGURE GENERIC PROFILE.....	3-2
<i>3.3.1 Add a Local Ethernet Bridge Module.....</i>	<i>3-3</i>
<i>3.3.2 Add a Remote Ethernet Flex Adapter.....</i>	<i>3-4</i>
<i>3.3.3 Add the Generic Flex Module.....</i>	<i>3-6</i>
SECTION 3.4 MODULE CONFIGURATION .....	3-7
<i>3.4.1 Fault Mode [Word 0 (Bits 2, 3, 4, 5, 10, 11, 12, 13)] .....</i>	<i>3-10</i>
<i>3.4.2 Input Type [Words 1 – 8 (Bits 0 to 4)] .....</i>	<i>3-10</i>
<i>3.4.3 Input Filter [Words 1 – 8 (Bits 5 to 7)] .....</i>	<i>3-11</i>
<i>3.4.4 Data Format [Words 1 – 8 (Bits 8 to 10)] .....</i>	<i>3-12</i>
<i>3.4.5 Open Circuit Mode [Words 1 – 8 (Bits 12 and 13)] .....</i>	<i>3-14</i>
<i>3.4.6 Disable CJC [Words 1 – 8 (Bit 14)].....</i>	<i>3-14</i>
<i>3.4.7 Temperature Units [Words 1 – 8 (Bit 15)] .....</i>	<i>3-14</i>
<i>3.4.8 Low Alarm Threshold [Words 9, 12, 15, 18, 21, 24, 2, 30] .....</i>	<i>3-14</i>
<i>3.4.9 High Alarm Threshold [Words 10, 13, 16, 19, 22, 25, 28, 31].....</i>	<i>3-15</i>
<i>3.4.10 User Alarm Deadband [Words 11, 14, 17, 20, 23, 26, 29, 32].....</i>	<i>3-15</i>
<i>3.4.11 Calibration Offset [Words 33 to 40] .....</i>	<i>3-16</i>

3.4.12 CJC Offset [Words 41 to 48].....	3-16
SECTION 3.5 READ INPUT AND STATUS DATA .....	3-16
3.5.1 Input Data [Words 0 to 7].....	3-18
3.5.2 UnderRange Alarms [Word 8 (Bits 0 to 7)].....	3-18
3.5.3 OverRange Alarm [Word 8 (Bits 8 to 15)].....	3-18
3.5.4 User Low Alarm [Word 9 (Bits 0 to 7)] .....	3-18
3.5.5 User High Alarm [Word 9 (Bits 8 to 15)].....	3-19
3.5.6 Open Circuit Alarm [Word 10 (Bits 0 to 7)].....	3-19
3.5.7 CJC Alarm [Word 10 (Bits 8 & 9)] .....	3-19
3.5.8 Diagnostics [Word 11 (Bits 0 to 7)] .....	3-19
SECTION 3.6 TECHNICAL ASSISTANCE.....	3-22
SECTION 3.7 DECLARATION OF CONFORMITY.....	3-22
<b>APPENDIX A MODULE SPECIFICATIONS .....</b>	<b>A-1</b>
<b>INDEX.....</b>	<b>I-1</b>

## Preface

Read this preface to familiarize yourself with the rest of the manual. This preface covers the following topics:

- Who should use this manual
- How to use this manual
- Related documentation
- Technical support
- Documentation
- Conventions used in this manual

## Use This Manual

Use this manual if you are responsible for designing, installing, programming, or troubleshooting control systems that use Allen-Bradley I/O and/or compatible controllers, such as MicroLogix, CompactLogix, ControlLogix, SLC 500 or PLC 5.

## How to Use This Manual

As much as possible, we organized this manual to explain, in a task-by-task manner, how to install, configure, program, operate, and troubleshoot a control system using the 1794sc-IF8IU.

## Related Documentation

The table below provides a listing of publications that contain important information about Allen-Bradley PLC systems.

Document Title	Document Number
1794 Flex IO Product Data	1794-2.1
CompactLogix System Overview	1769-SO001A-EN-P
ControlLogix System User Manual	1756-6.5.13-SEP99
ControlNet Modules in Logix5000 Control Systems User Manual	CNET-UM001C-EN-P
EtherNet/IP Modules in Logix5000 Control Systems User Manual	ENET-UM001G-EN-P
Allen-Bradley Programmable Controller Grounding and Wiring Guidelines	1770-4.1

## Technical Support

For technical support, please contact your local Rockwell Automation TechConnect Office for all Spectrum products. Contact numbers are as follows:

- USA 1-440-646-6900
- United Kingdom 01-908-635-230
- Australia 1-800-809-929
- Mexico 001-888-365-8677
- Brazil 55-11-3618-8800
- Europe +49-211- 41553-630

or send an email to [support@spectrumcontrols.com](mailto:support@spectrumcontrols.com)

## Documentation

If you would like a manual, you can download a free electronic version from the Internet at [www.spectrumcontrols.com](http://www.spectrumcontrols.com).

## Conventions Used in This Manual

The following conventions are used throughout this manual:

- Bulleted lists (like this one) provide information not procedural steps.
- lists provide sequential steps or hierarchical information.
- *Italic* type is used for emphasis.
- **Bold** type identifies headings and sub-headings:

<b>WARNING</b> 	Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. These messages help you to identify a hazard, avoid a hazard, and recognize the consequences.
<b>ATTENTION</b> 	Actions ou situations risquant d'entraîner des blessures pouvant être mortelles, des dégâts matériels ou des pertes financières. Les messages « Attention » vous aident à identifier un danger, à éviter ce danger et en discerner les conséquences.
<b>NOTE</b> 	Identifies information that is critical for successful application and understanding of the product.

# Chapter 1

## Module Overview

This chapter describes the 1794sc-IF8IU Isolated Universal input module, and explains how the module reads current, voltage, RTD, resistance, and thermocouple/millivolt analog input data. Included is information about:

- General description
- Input types and ranges
- Data formats
- Filter frequencies
- Hardware features
- System overview
- Module operation

### Section 1.1 General Description

The isolated universal input module supports current, voltage, RTD, resistance, thermocouple, and millivolt type inputs. The module digitally converts and stores analog data from any combination mentioned above. Each input channel is individually configured via software for a specific input device, data format, filter frequency, and provides open-circuit, over-range, under-range detection and indication.

### Section 1.2 Input Types and Ranges

The tables below list the input types and their associated ranges.

Input Type	Range
B Type Thermocouple	300 °C to 1820 °C (572 °F to 3308 °F)
C Type Thermocouple	0 °C to 2315 °C (32 °F to 4199 °F)
E Type Thermocouple	-270 °C to 1000 °C (-454 °F to 1832 °F)
J Type Thermocouple	-210 °C to 1200 °C (-346 °F to 2192 °F)
K Type Thermocouple	-270 °C to 1370 °C (-454 °F to 2498 °F)
N Type Thermocouple	-210 °C to 1300 °C (-346 °F to 2372 °F)

<b>Input Type</b>	<b>Range</b>	
R Type Thermocouple	0 °C to 1768 °C	(32 °F to 3214 °F)
S Type Thermocouple	0 °C to 1768 °C	(32 °F to 3214 °F)
T Type Thermocouple	-270 °C to 400 °C	(-270 °F to 752 °F)
100 Ω Pt α 0.385	-200 °C to 850 °C	(-328 °F to 1562 °F)
200 Ω Pt α 0.385	-200 °C to 850 °C	(-328 °F to 1562 °F)
500 Ω Pt α 0.385	-200 °C to 850 °C	(-328 °F to 1562 °F)
1000 Ω Pt α 0.385	-200 °C to 850 °C	(-328 °F to 1562 °F)
100 Ω Pt α 0.3916	-200 °C to 630 °C	(-328 °F to 1166 °F)
200 Ω Pt α 0.3916	-200 °C to 630 °C	(-328 °F to 1166 °F)
500 Ω Pt α 0.3916	-200 °C to 630 °C	(-328 °F to 1166 °F)
1000 Ω Pt α 0.3916	-200 °C to 630 °C	(-328 °F to 1166 °F)
10 Ω Cu α 0.426	-100 °C to 260 °C	(-148 °F to 500 °F)
100 Ω Ni α 0.618	-100 °C to 260 °C	(-148 °F to 500 °F)
120 Ω Ni α 0.672	-80 °C to 260 °C	(-112 °F to 500 °F)
604 Ω NiFe α 0.518	-100 °C to 200 °C	(-148 °F to 392 °F)
Resistance	0 to 150 Ω	
	0 to 1000 Ω	
	0 to 3000 Ω	
Voltage	±50 mV	
	±100 mV	
	0 to 5 V	
	1 to 5 V	
	±10 V	
	0 to 10 V	
Current	4 to 20 mA	
	0 to 20 mA	

## Section 1.3

### Data Formats

For each module, the data can be configured for:

- Engineering units × 1
- Engineering units × 10
- Scaled-for-PID
- Percent of full-scale

- Raw/proportional data
- CJC Engineering Units
- CJC scaled-for-PID
- CJC percent of full range

## Section 1.4 Filter Frequencies


The module uses a digital filter that provides high frequency noise rejection for each input signal. The filter for each channel is programmable allowing you to select from six different filter frequencies:

- 4.17 Hz
- 10 Hz
- 16.7 Hz
- 19.6 Hz
- 62 Hz
- 470 Hz

## Section 1.5 Hardware Features

Each module requires a terminal base unit. Terminal base units are connected together to form the backplane for the system. Each base unit contains terminals for field terminations. Field terminations are wired as differential inputs, with the exception of RTD and resistance type inputs. Two cold junction compensation (CJC) sensors can be added to the terminal base unit to enable accurate readings when using thermocouple input types. Each CJC sensor compensates for offset voltages introduced into the input signal as a result of the cold-junction where the thermocouple wires come into contact with the base unit. Module configuration is accomplished using the controller's programming software. In addition, some controllers support configuration via the user program. In either case, the module configuration is stored in the memory of the controller. Refer to your controller's user manual for more information. The illustration below shows the module's hardware features.

**Figure 1-1. Hardware Features**

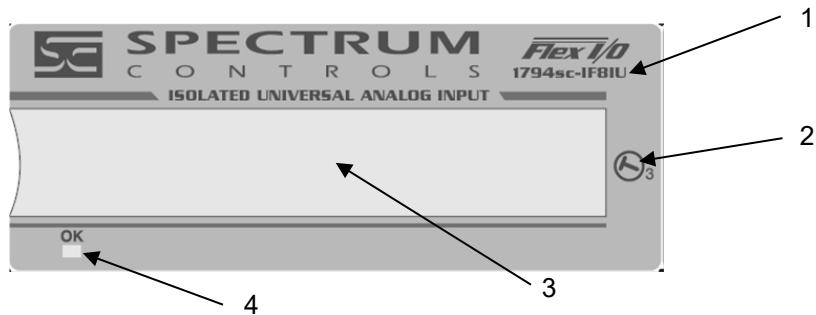

Item	Description
1	Module Catalog Number
2	Module key-switch position
3	Removable label
4	Power/Status LED

## Section 1.6 System Overview

The module communicates to the controller through the base unit bus interface. The module also receives 5 and 24 VDC power through the bus interface.

<b>NOTE</b> 	An external power supply is required for all 2-wire transmitters.
--	---


### 1.6.1 Module Power-up

At power-up, the module performs a check of its internal circuits, memory and basic functions. After power-up checks are complete, the module waits for valid channel configuration data. If an invalid configuration is detected, the module generates a configuration error. Once a channel is properly configured and enabled, it continuously converts the input data to a digital value within the currently selected data range. Each time a channel is read by the input module, that data value is tested by the module for an over-range, under-range, or open-circuit condition. If such a condition is detected, a unique bit is set in the channel status word. The channel status word is described in the Input Data File in Chapter 3. Using the module image table, the controller reads the two's complement binary converted input data from the module. This typically occurs at the end of the program scan or when commanded by the control program. If the controller and the module determine that the data transfer has been made without error, the data is made available to the control program.

## Section 1.7 Module Operation

The module measures each analog signal using a dedicated A/D converter for each channel. The converter reads the signal, and converts it as required for the type of input selected. If thermocouples are being used, the module continuously samples each CJC sensor, and compensates for temperature changes at the terminal base cold junction, between the thermocouple wire and the input terminal.

See the block diagram below.

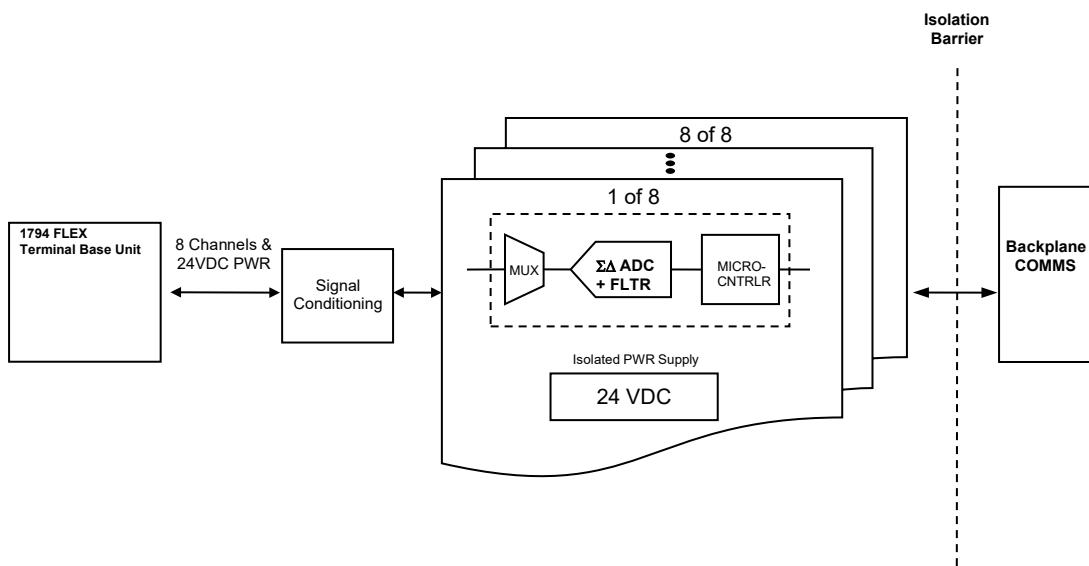

The module is designed to support up to 8 isolated channels of RTD, resistance, voltage, current, or thermocouple.

Thermocouple measurements use two cold junction compensation sensors placed at two different locations on the terminal base unit. The location of each CJC sensor was chosen to calculate the overall CJC error accurately for each channel. Thermocouple support includes types J, K, T, E, R, S, B, N, and C. In thermocouple mode, the 1794sc-IF8IU will measure thermocouple and CJC voltages and convert the results to a linearized temperature reading.

RTD support includes types Pt 385, Pt 3916, Ni 618, Ni 672, Cu 426, and NiFe 518. In RTD and resistance mode, the module will inject a constant current through the RTD or resistor, measure the voltage across the resistance and convert to a linearized temperature or resistance reading. The 1794sc-IF8IU supports 2- and 3-wired RTD inputs.

When configured for current or voltage type inputs, the module converts the analog values directly into digital counts.



# Chapter 2

## Installation and Wiring

This chapter will cover:

- Compliance to European union directives
- General considerations
- Power requirements
- Installing the module
- Field wiring connections

### Section 2.1 Compliance to European Union Directives

This product is approved for installation within the European Union and EEA regions. It has been designed and tested to meet the following directives.

#### 2.1.1 EMC Directive

The 1794sc-IF8IU module tested to meet Council Directive 2014/30/EU Electromagnetic Compatibility (EMC) and the following standards, in whole or in part, documented in a technical construction file:

- EN 61000-6-4 EMC–Generic Emission Standard, Part 2–Industrial Environment
- EN 61000-6-2 EMC–Generic Immunity Standard, Part 2–Industrial Environment

UKCA Electromagnetic Compatibility Regulations 2016

- BS EN 61131-2, BS EN 61000-6-4, BS EN 61000-6-2.

This product is intended for use in an industrial environment.

#### 2.1.2 ATEX Directive

This product is tested to meet Council Directive 2014/30/U/ATEX, and the following standards, in whole or in part, documented in a technical construction file:

- EN 60079-0 Explosive atmospheres – Part 0: Equipment – General requirements.
- EN 60079-7 Explosive atmospheres – Part 7: Equipment protection by increased safety "e".

This module also meets the standards for the United Kingdom Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016:

- BS EN 60079-0
- BS EN 60079-7

## Section 2.2

### General Considerations

Flex I/O is suitable for use in an industrial environment when installed in accordance with these instructions. Specifically, this equipment is intended for use in clean, dry environments Pollution degree 2<sup>1</sup> and to circuits not exceeding Over Voltage Category II<sup>2</sup>(IEC 60664-1)<sup>3</sup>.

#### 2.2.1 Hazardous Location Considerations

This equipment is suitable for use in Class I, Division 2, Groups A, B, C, D or non-hazardous locations only. The following WARNING statement applies to use in hazardous locations.

WARNING	<b>EXPLOSION HAZARD</b>
	<ul style="list-style-type: none"><li>Substitution of components may impair suitability for Class I, Division 2. Do not replace components or disconnect equipment unless power has been switched off or the area is known to be non-hazardous.</li><li>Do not connect or disconnect components unless power has been switched off or the area is known to be non-hazardous.</li><li>Device shall be installed in an enclosure which can only be opened with the use of a tool.</li><li>All wiring must comply with N.E.C. article 501-4(b), 502-4(b), or 503-3(b), as appropriate for Class I, Class II, and Class III equipment.</li></ul>

---

<sup>1</sup> Pollution Degree 2 is an environment where, normally, only non-conductive pollution occurs except that occasionally a temporary conductivity caused by condensation shall be expected.

<sup>2</sup> Over Voltage Category II is the load-level section of the electrical distribution system. At this level, transient voltages are controlled and do not exceed the impulse voltage capability of the product's insulation.

<sup>3</sup> Pollution Degree 2 and Over Voltage Category II are International Electrotechnical Commission (IEC) designations

### 2.2.2 Prevent Electrostatic Discharge

<b>WARNING</b> 	<p>Electrostatic discharge can damage integrated circuits or semiconductors if you touch analog I/O module bus connector pins or the terminal block on the input module. Follow these guidelines when you handle the module:</p> <ul style="list-style-type: none"><li>• Touch a grounded object to discharge static potential.</li><li>• Wear an approved wrist-strap grounding device.</li><li>• Do not touch the bus connector or connector pins.</li><li>• Do not touch circuit components inside the module.</li><li>• If available, use a static-safe workstation.</li><li>• When it is not in use, keep the module in its static-shield bag.</li></ul>
---	---

### 2.2.3 Remove Power

<b>WARNING</b> 	<p>Remove power before removing or inserting this module. When you remove, or insert, a module with power applied, an electrical arc may occur. An electrical arc can cause personal injury or property damage by:</p> <ul style="list-style-type: none"><li>• Sending an erroneous signal to your system's field devices, causing unintended machine motion.</li><li>• Causing an explosion in a hazardous environment.</li><li>• Causing an electrical arc. Such arcing causes excessive wear to contacts on both the module and its mating connector and may lead to premature failure.</li></ul>
---	--

### 2.2.4 Selecting a Location

#### Reducing Noise

Most applications require installation in an industrial enclosure to reduce the effects of electrical interference. Analog inputs are highly susceptible to electrical noise. Electrical noise coupled to the analog inputs will reduce the performance (accuracy) of the module. Group your modules to minimize adverse effects from radiated electrical noise and heat. Consider the following conditions when selecting a location for the analog module. Position the module:

- Away from sources of electrical noise such as hard-contact switches, relays, and AC motor drives
- Away from modules which generate significant radiated heat, such as the 1794-OB32. Refer to the module's heat dissipation specification.

In addition, route shielded, twisted-pair analog input wiring away from any high voltage I/O wiring.

## Section 2.3 Power Requirements

The module receives power through the bus interface from the +5 VDC/+24 VDC system power supply. The maximum current drawn by the module is shown in the table below.

5 VDC	24 VDC
80 mA	240 mA

The wiring of the terminal base unit is determined by the current draw through the terminal base. Make certain that the current draw does not exceed 10 A.


<b>NOTE</b> 	Total current draw through the terminal base unit is limited to 10 A. Separate power connections may be necessary.
--	---

Methods of wiring the terminal base units are shown in the illustrations below.

### 2.3.1 Wiring the Terminal Base Units (1794-TB3G shown)

<b>NOTE</b> 	Do not daisy chain power or ground from the terminal base unit to any AC or DC digital module terminal base unit.
--	---

Daisy-chaining:

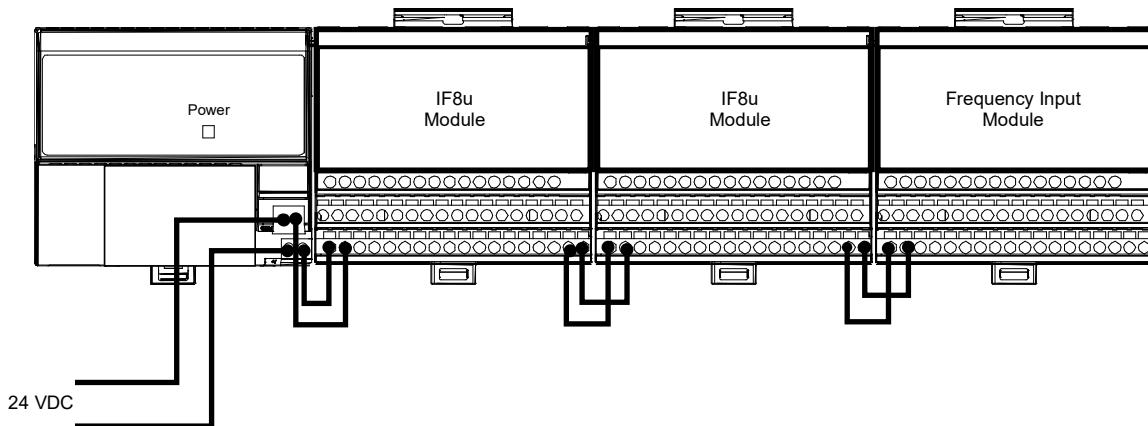


**NOTE**

All modules must be frequency or IF8IU modules for this configuration.

Wiring when total current draw is less than 10 A:

Individual:

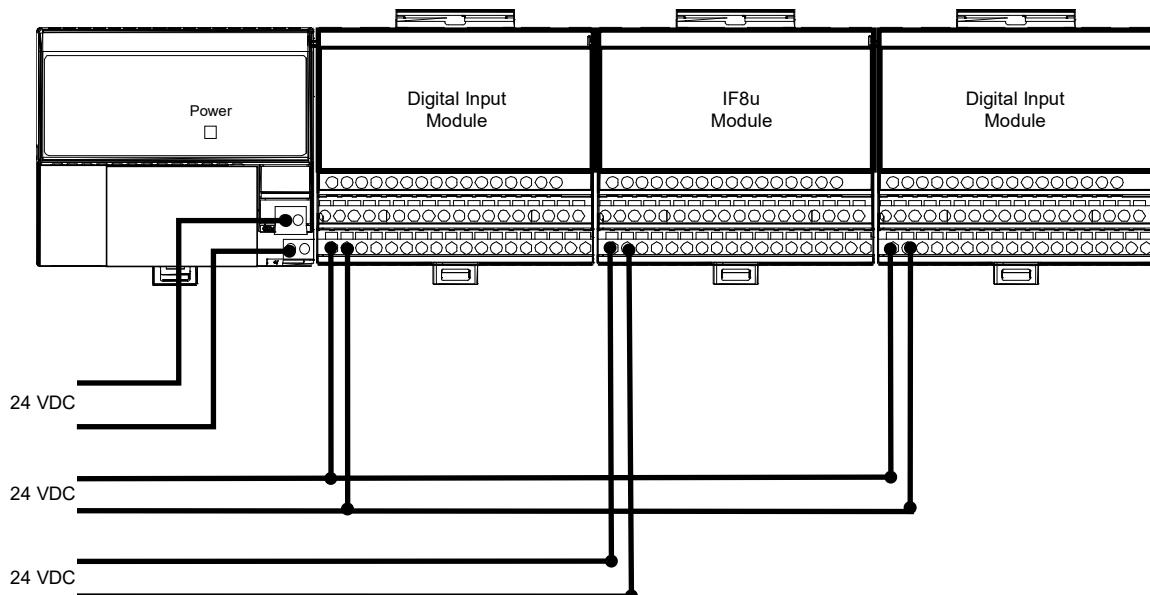
**NOTE**

Use this configuration if using any “noisy” DC digital I/O modules in your system.

IF8IU module wiring separate from digital wiring:

Wiring when total current draw is greater than 10A:

Combination:

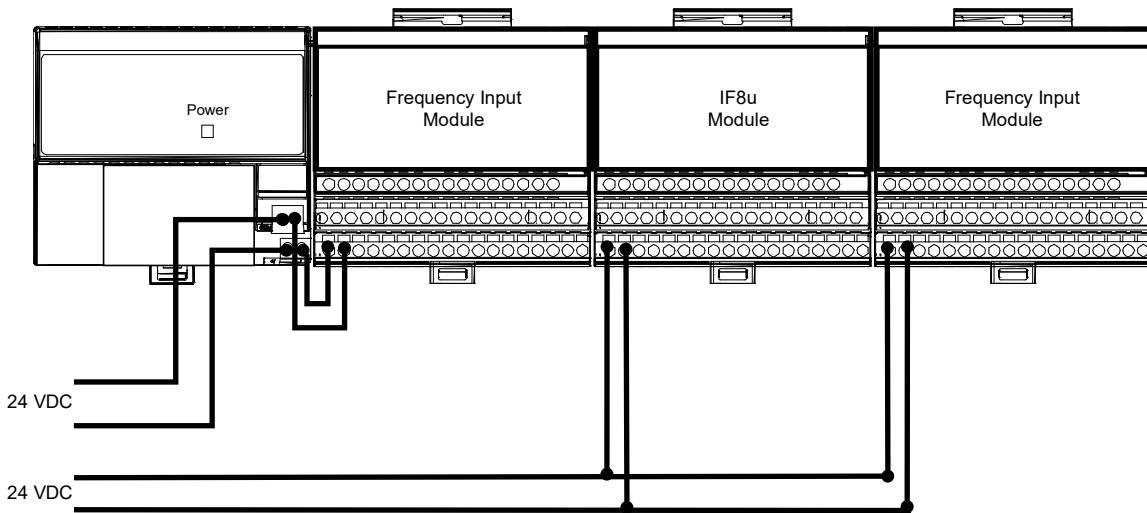**NOTE**

All modules powered by the same power supply must be frequency or IF8IU modules for this configuration

Total current draw through any base unit must not be greater than 10A.

## Section 2.4 Installing the Module

Installation of the analog module consists of:

- Mounting the terminal base unit.
- Installing the IF8IU module into the terminal base unit.
- Installing the connecting wiring to the terminal base unit.

If you are installing your module into a terminal base unit that is already installed, proceed to Mounting the IF8IU Module on the Terminal Base Unit in the next section.


### 2.4.1 Mounting the Terminal Base Unit on a DIN Rail

**WARNING**


Do not remove or replace a terminal base unit when power is applied. Interruption of the FlexBus can result in unintended operation or machine motion.

1. Remove the cover plug (if used) in the male connector of the unit to which you are connecting this terminal base unit.


2. Check to make sure that the 16 pins in the male connector on the adjacent device are straight, and in line, so that the mating female connector on this terminal base unit will mate correctly.
3. Position the terminal base on the  $35 \times 7.5$  mm DIN rail A (A-B PN 199-DR1; 46277-3) at a slight angle with hook B on the left side of the terminal base hooked into the right side of the unit on the left. Proceed as follows:

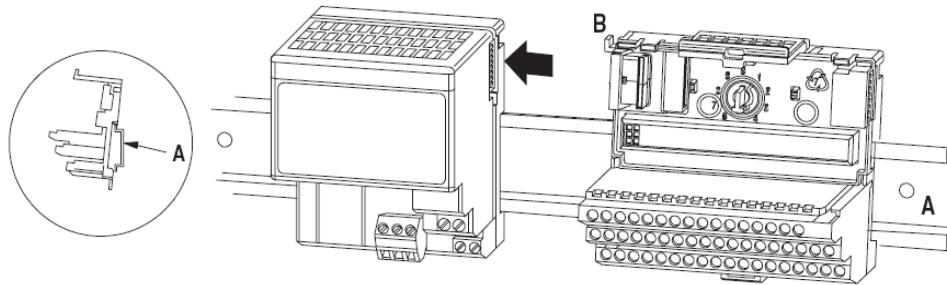

Position terminal base at a slight angle and hooked over the top of the DIN rail.

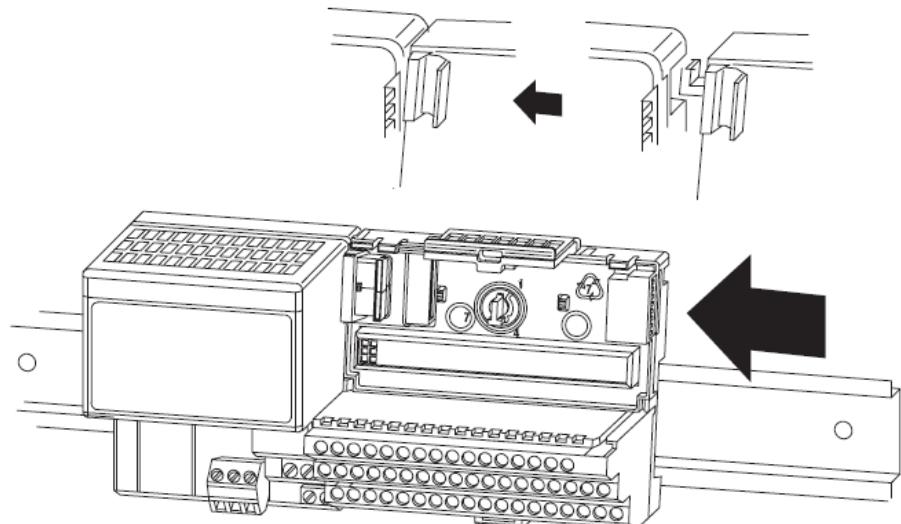


Slide the terminal base unit over tight against the adapter.  
Make sure the hook on the terminal base slides under the edge of the adapter and the flexbus connector is fully retracted.

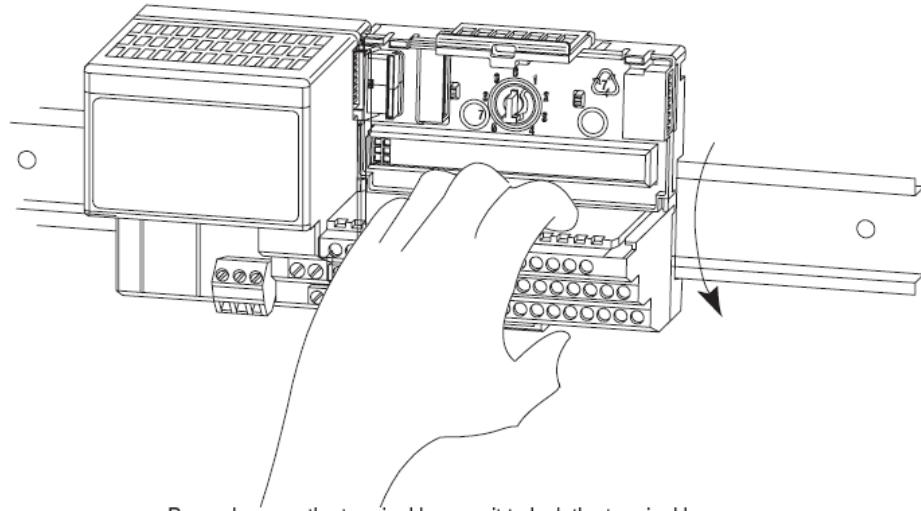

Press down on the terminal base unit to lock the terminal base on the DIN rail. If the terminal base does not lock into place, use a screwdriver or similar device to open the locking tab, press down on the terminal base until flush with the DIN rail and release the locking tab to lock the base in place.

30077-M

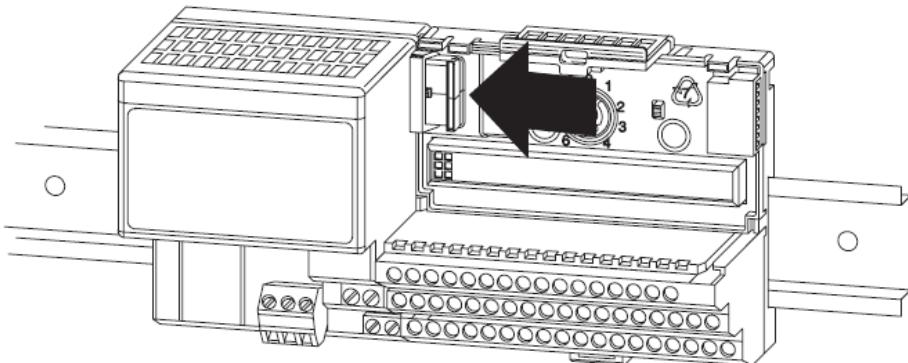

Gently push the flexbus connector into the side of the adapter to complete the backplane connection.

4. Repeat the above steps to install the next terminal base.


#### 2.4.2 Panel/Wall Mounting

Installation on a wall or panel consists of:

- Laying out the drilling points on the wall or panel.
- Drilling the pilot holes for the mounting screws.
- Mounting the adapter mounting plate.
- Installing the terminal base units and securing them to the wall or panel.
- See Appendix A for recommendations and specifications on horizontal versus vertical mounting.

If you are installing your module into a terminal base unit that is already installed, proceed to Mounting the IF8IU Module on the Terminal Base Unit in the next section.


Use the mounting kit Cat. No. 1794-NM1 for panel/wall mounting.

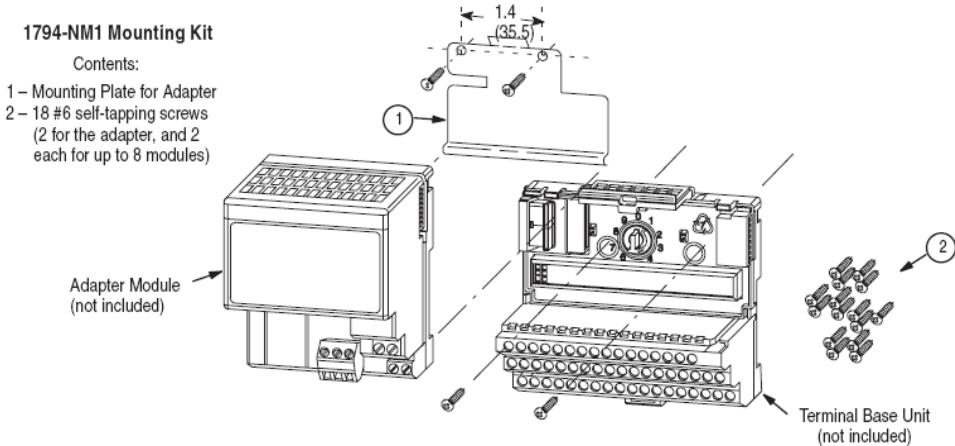

To install the mounting plate on a wall or panel:

1. Lay out the required points on the wall/panel as shown in the drilling dimension drawing.

#### Drilling Dimensions for Panel/Wall Mounting of Flex IO

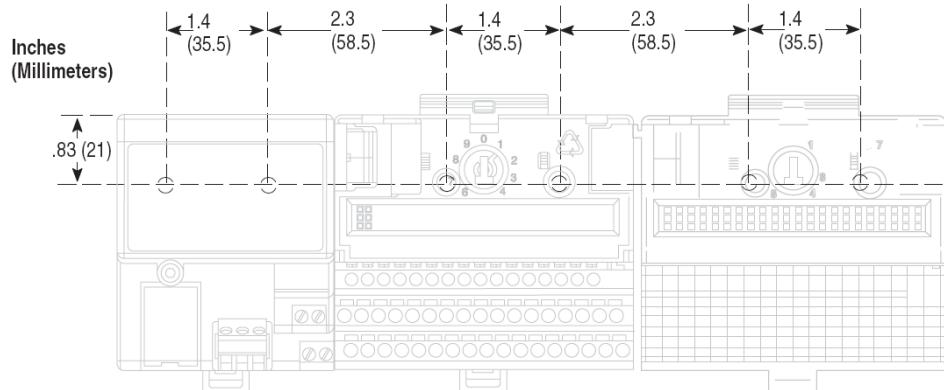

2. Drill the necessary holes for the #6 self-tapping mounting screws.
3. Mount the mounting plate (1) for the adapter module using two#6 self-tapping screws (18 included for mounting up to 8 modules and the adapter).

<b>NOTE</b> 	Make certain that the mounting plate is properly grounded to the panel. Refer to <i>Industrial Automation Wiring and Grounding Guidelines</i> , publication 1770-4.1.
-----------------	---

4. Hold the adapter (2) at a slight angle and engage the top of the mounting plate in the indentation on the rear of the adapter module.
5. Press the adapter down flush with the panel until the locking lever locks.
6. Position the terminal base unit up against the adapter and push the female bus connector into the adapter.
7. Secure to the wall with two #6 self-tapping screws.

8. Repeat for each remaining terminal base unit.


**WARNING**

The adapter is capable of addressing eight modules. Do not exceed a maximum of eight terminal base units in your system.

#### 2.4.3 Mounting the IF8IU Module on the Terminal Base Unit

The IF8IU isolated input module mounts on a 1794-TB3G or TB3GS terminal base unit as follows:

1. Rotate the key-switch (1) on the terminal base unit (2) clockwise to position 3 as required for the IF8IU module.

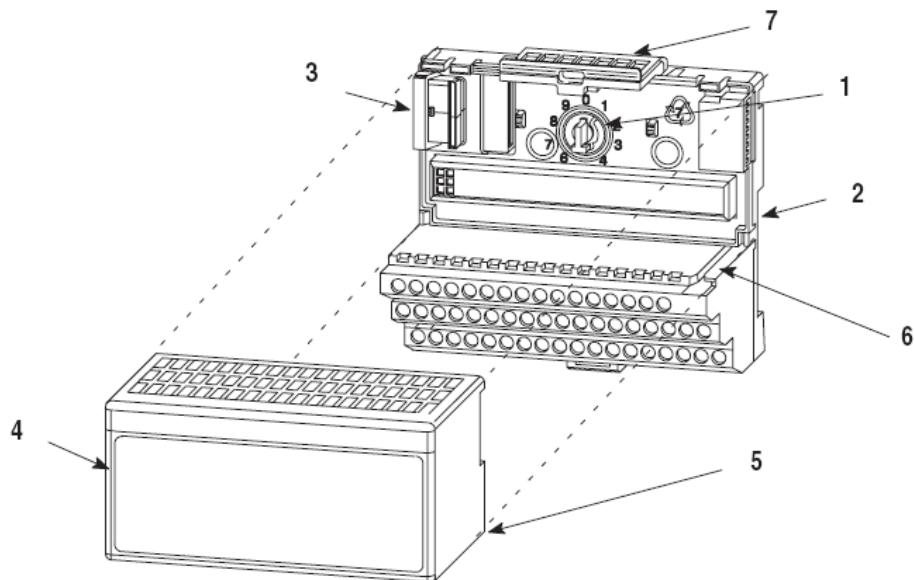

2. Make certain the FlexBus connector (3) is pushed all the way to the left to connect with the neighboring terminal base/adapter. **You cannot install the module unless the connector is fully extended.**
3. Make sure that the pins on the bottom of the module are straight so they will align properly with the connector in the terminal base unit.

**NOTE**

This module is UL-listed only when used with listed Allen-Bradley catalog numbers 1794-TB3G or TB3GS terminal base units.

<b>WARNING</b> 	<p>Remove field-side power before removing or inserting the module. This module is designed so you can remove and insert it under backplane power. When you remove, or insert, a module with field-side power applied, an electrical arc may occur. An electrical arc can cause personal injury or property damage by:</p> <ul style="list-style-type: none"> <li>• Sending an erroneous signal to your system's field devices causing unintended machine motion</li> <li>• Causing an explosion in a hazardous environment</li> </ul> <p>Repeated electrical arcing causes excessive wear to contacts on both the module and its mating connector. Worn contacts may create electrical resistance.</p>
---	---


4. Position the module (4) with its alignment bar (5) aligned with the groove (6) on the terminal base.
5. Press firmly and evenly to seat the module in the terminal base unit. The module is seated when the latching mechanism (7) is locked into the module.
6. Repeat the above steps to install the next module in its terminal base unit.

## Section 2.5 Field Wiring Connections

Wiring to the IF8IU module is made through the terminal base unit on which the module mounts. Compatible terminal base units are:


Module	1794-TB3G	1794-TB3GS
1794sc-IF8IU	Yes	Yes

1794-TB3G

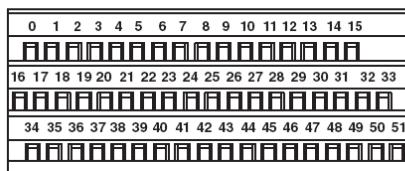

34 and 50 = 24V dc  
 35 and 51 = common  
 16 and 33 = chassis ground  
 40 thru 45 = chassis ground

1794-TB3GS

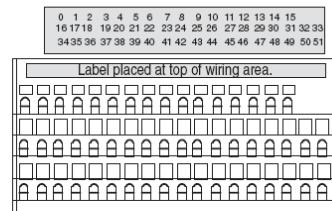

34 and 50 = 24V dc  
 35 and 51 = common  
 16 and 33 = chassis ground  
 40 thru 45 = chassis ground

### 2.5.1 Field Wiring using a 1794-TB3G and TB3GS Terminal Base

1. Connect the individual signal wiring to numbered terminals on the 0-15 row (A) and 17-32 row (B) on the terminal base unit. Connect the input devices as shown in the wiring table.
2. Terminate shields: to terminals 16 or 33 on row B, or 40 through 45 on row C.

3. Connect +24 VDC to terminal 34 on the 34-51 row (C), and 24 VDC common to terminal 35 on the 34-51 row (C).

<b>NOTE</b> 	To reduce susceptibility to noise, power IF8IU modules and digital modules from separate power supplies. Do not exceed a length of 33 ft. (10 m) for DC power cabling.
--	--

4. If daisy chaining the +24 VDC power to the next base unit, connect a jumper from terminal 50 (+24 V) on this base unit to terminal 34 and from terminal 51 (24 VDC common) to terminal 35 on the next base unit.


<b>NOTE</b> 	Do not daisy chain power or ground from the IF8IU terminal base unit to any AC or DC digital module terminal base unit.
--	---

<b>NOTE</b> 	The IF8IU module does not receive power from the backplane. +24 VDC power must be applied to your module before operation. If power is not applied, the module position will appear to the adapter as an empty slot in your chassis. If the adapter does not recognize your module after installation is completed, cycle power to the adapter.
---	---

<b>NOTE</b> 	Use supply wire for 10 °C above surrounding ambient.
--	--





**Figure 2-1. Connections**

Connections for Terminal Base 1794-TB3G shown

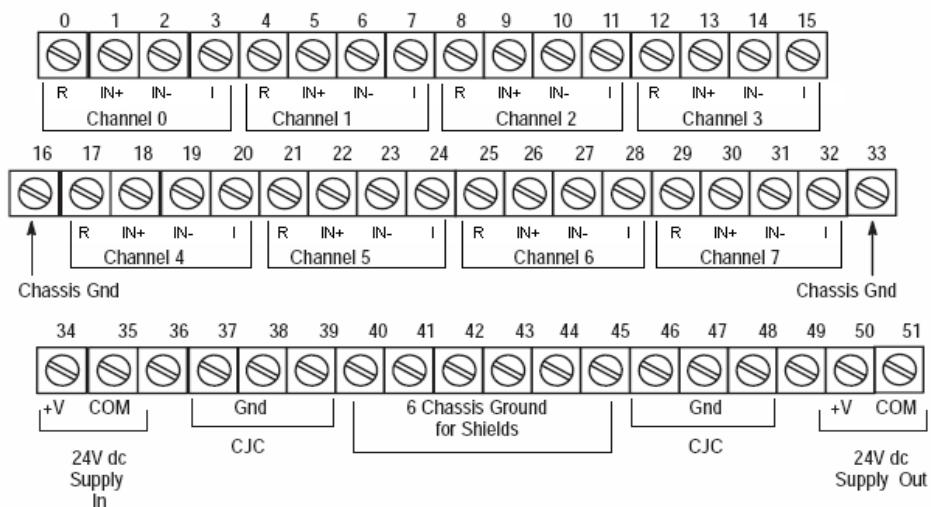
**Table 2-1. Input Connections**

Type of Input	Connect the Following				
	R	IN+	IN-	I	Shield <sup>1</sup>
RTD/Res 2-wire		1	2		
RTD/Res 3-wire	0	1	2		
Thermocouple		1	2		
V/mV Source		1	2		
mA Source		1	2	3	

<sup>1</sup>Shield can be connected to chassis ground terminals 16, 33, and 40...45.

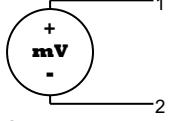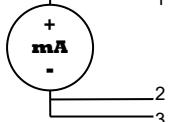**RTD/Resistance****Thermocouple****mV Source****mA**

Numbers 0, 1, 2, and 3 are wiring numbers of the sensor used. For terminal numbers corresponding to R, IN+, IN-, I, refer to Terminal Base Unit Wiring Connections below.

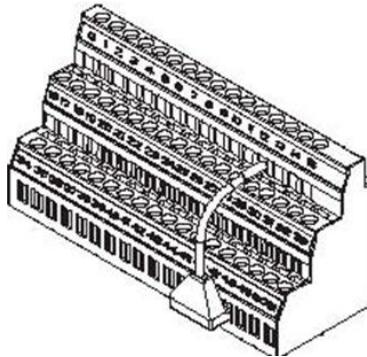**Table 2-2. CJC Connections**

<b>Input</b>	<b>CJC Sensor</b>			
	<b>+</b>	<b>Chassis Ground</b>	<b>-</b>	<b>CJC Tail<sup>1</sup></b>
CJC1	C37	C38	C39	A1
CJC2	C-46	C-47	C-48	B31

<sup>1</sup>Terminals 37, 38, and 39, and 46, 47, and 48 are for cold junction compensation (with 38 and 47 chassis GND). Connect the tail of CJC 1 to terminal 1 and CJC2 to terminal 31 if channels 0...3 or 0...7 are configured for thermocouples.

**Table 2-3. Terminal Base Unit Connections**


Channel Number	1794-TB3G and 1794-TB3GS Terminal Base Units			
	Signal Return (R)	Input + (IN+)	Input (-)	I Return (-)
0	A-0	A-1	A-2	A-3
1	A-4	A-5	A-6	A-7
2	A-8	A-9	A-10	A-11
3	A-12	A-13	A-14	A-15
4	B-17	B-18	B-19	B-20
5	B-21	B-22	B-23	B-24
6	B-25	B-26	B-27	B-28
7	B-29	B-30	B-31	B-32



<sup>1</sup>Terminals 16, 33, and 40 through 45 are chassis ground.


**NOTE**

Total current draw through the terminal base unit is limited to 10 A.  
Separate power connections to the terminal base unit may be necessary.

The following examples show how to wire the module using the tables and diagrams listed above.

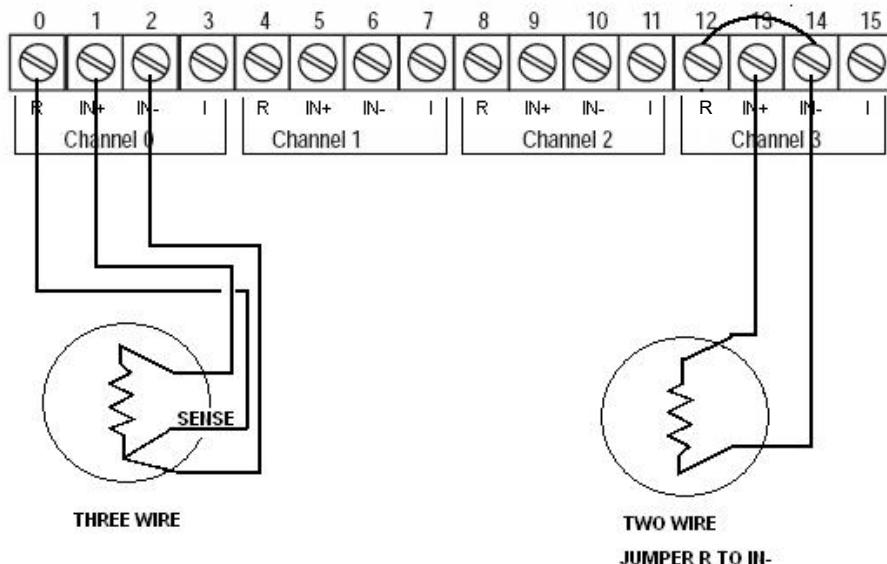**Figure 2-2. RTD & Resistance Wiring Diagram**

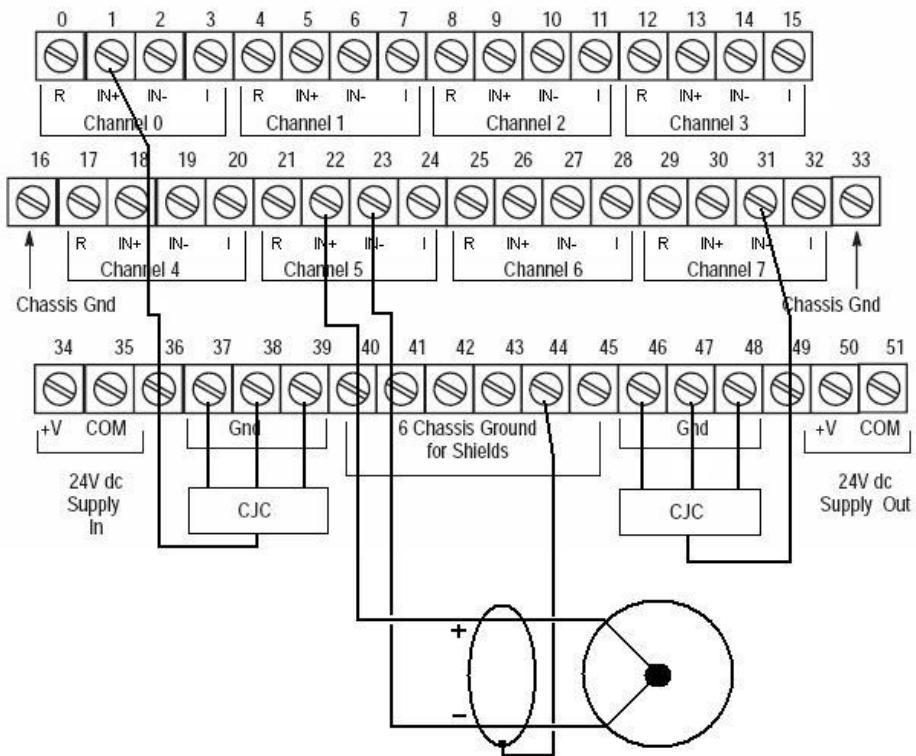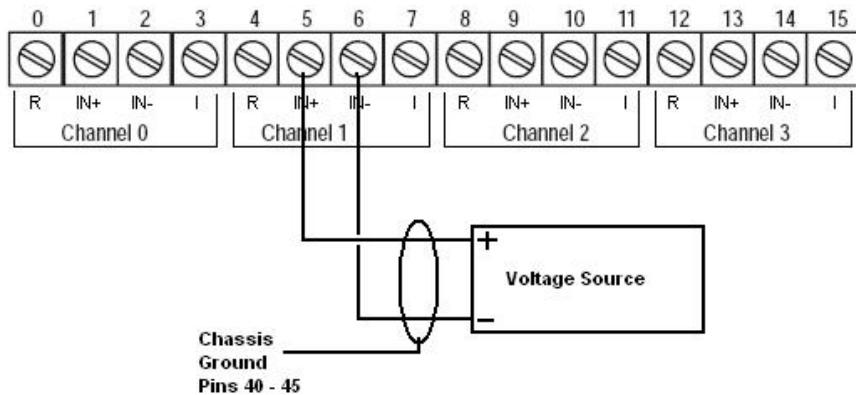**Figure 2-3. Thermocouple Wiring Diagram****Figure 2-4. Voltage Wiring Diagram**

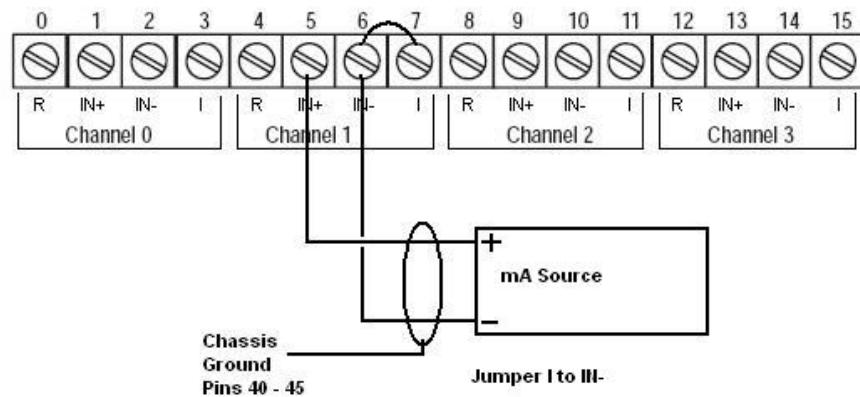**Figure 2-5. Current Wiring Diagram****NOTE**


Digital and analog power must be supplied by an Isolated Secondary Limited Energy Low Voltage source.

## Section 2.6

### Module Indicators

The IF8IU module has one status indicator (**OK**) that is on when power is applied and no hardware faults are present:

**Figure 2-6. Module Description**

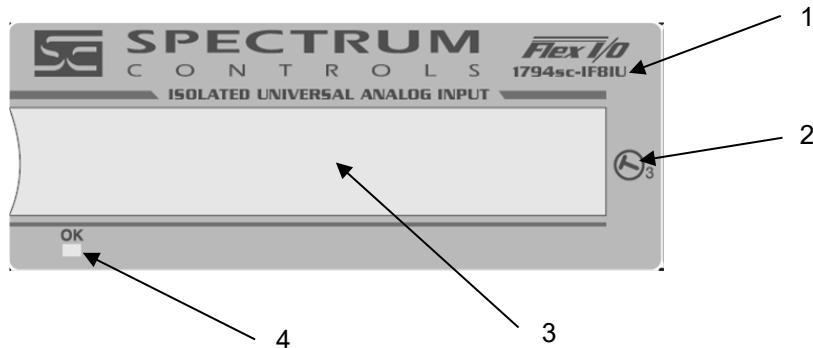

Item	Description
1	Module Catalog Number
2	Module key-switch position
3	Removable label
4	Power/Status LED

**Table 2-4. Module Status LED**

Module State	Condition	LED Color and State
New	Power up initialized complete and passed Self-Test. Loads stored configuration if it exists. Read Module Information Block.	RED, blink at 1 Hz
Not Config	Module has not received configuration from Master. It can Set and Get attributes.	GREEN, blink at 1 Hz
Idle	Controller in Program mode. Communications normal.	GREEN, solid
Active	Controller in Run mode and Communication Is normal.	GREEN, solid
Fault	FlexIO Comm. Fault or PU bit is one and /Fault=0.	GREEN, solid
Fatal Fault	Module fails self-tests or detects illegal state transition.	RED, solid

# Chapter 3

## Configuring the 1794sc-IF8IU

## Using RSLogix 5000

This chapter covers the following subjects:

- About this chapter
- Module memory map
- Configure generic profile
- Module configuration
- Reading input/status data

### Section 3.1

#### About this Chapter

This chapter describes how to configure the IF8IU module for the ControlLogix and CompactLogix system. In the examples below, the Control Net adapter and/or Ethernet adapter were used for communication between the Logix processor and the Flex IO bus.

<b>NOTE</b> 	Refer to the associated I/O scanner documentation if using a SLC controller with Control Net.
<b>NOTE</b> 	If using a PLC 5 controller, refer to the PLC 5 controller documentation for Control Net configuration information.
<b>NOTE</b> 	The Remote I/O and Device Net adapters do not support the 1794sc-IF8IU module. The IF8IU module is supported only by the Control Net and Ethernet adapters.


### Section 3.2

#### Module Memory Map

The following figure describes the data mapping for the module. The configuration image is written to the module using tags generated by the “generic

“generic Flex module” profile used to represent the IF8IU within RSLogix 5000. See section 3.3.3 for more details. Input data and status data can be read from the module using the input image and status image. Again, tags generated by the “generic Flex module” profile will be used to read the input and status image data.

**Figure 3-1. Module Memory Map**

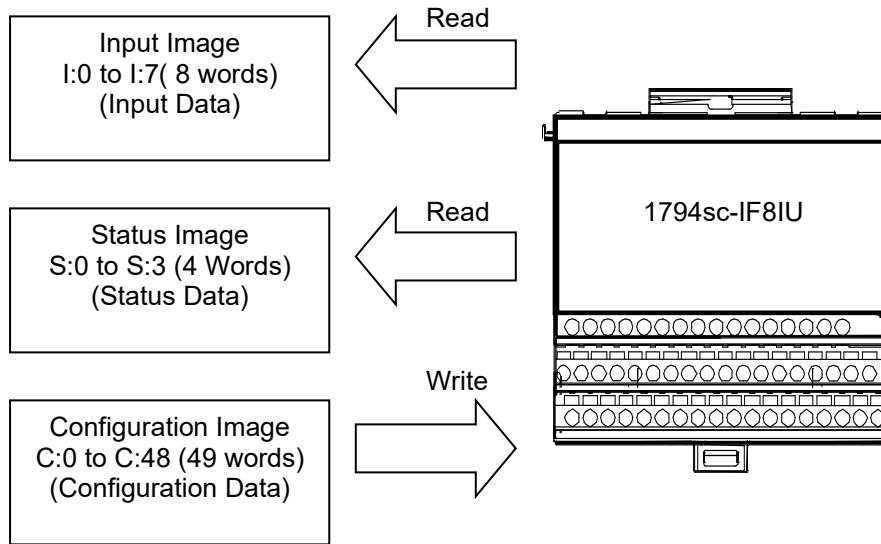

### Section 3.3 Configure Generic Profile

The generic Flex module profile is used to represent the IF8IU module within RSLogix 5000 since there is no custom profile available. Before the generic profile can be added to the IO configuration, the proper communication module needs to be added to the IO configuration first. Follow the procedure below to add a communication module to RSLogix 5000:


1. Add the new local communication module to your project.
2. Configure the local module, including:
  - a. Naming the module.
  - b. Choosing a communication format.
  - c. Setting the revision level.
  - d. Setting the module location as necessary such as the slot number for a 1756-CNB module.
  - e. Choosing an electronic keying method.
3. Add the new remote module to your project, such as a Flex Control Net adapter or Ethernet Adapter (that is, 1794-ACN15 or 1794-AENT, respectively).
4. Configure the remote module similarly to the local module.
5. Download the configuration to the controller.

<b>NOTE</b>	If you are using Control Net, you must schedule the network using “RSNetworks for Control Net” after adding the local and remote communication modules.
<b>NOTE</b>	When you create a new RSLogix 5000 project with the CompactLogix 1769-L32C or L35CR controller, the Controller Organizer creates a Control Net port in the local chassis. In this case, you do not need to add a separate local communication module.
<b>NOTE</b>	When you create a new RSLogix 5000 project with the CompactLogix 1769-L23E, 1769-L32E or L35E controller, The Controller Organizer creates an Ethernet port in the local chassis. In this case, you do not need to add a separate local communication module.

### 3.3.1 Add a Local Ethernet Bridge Module


After you have started RSLogix 5000 software and created a controller project, you can add Ethernet communication modules. A local Ethernet communication module is a module that resides in the same chassis as the controller.

1. Select **New Module** for the I/O Configuration.

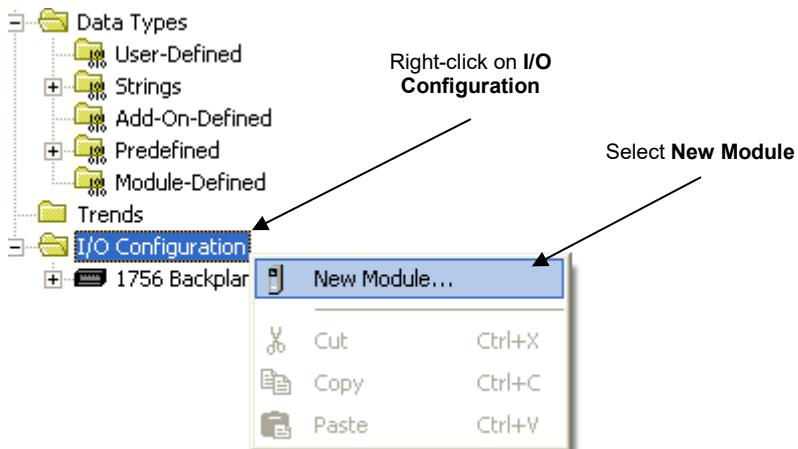


2. Select the module type from the **Select Module Type** popup.

The example below uses a 1756-ENBT module.

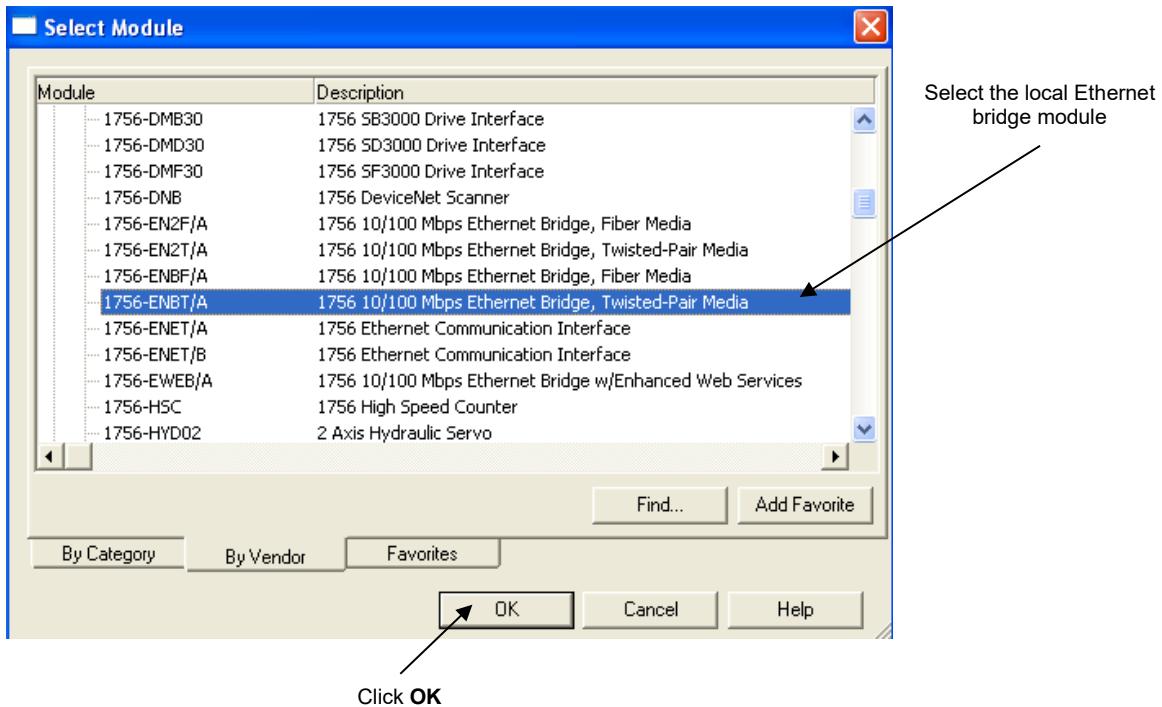


### 3. Configure the local Ethernet bridge module.

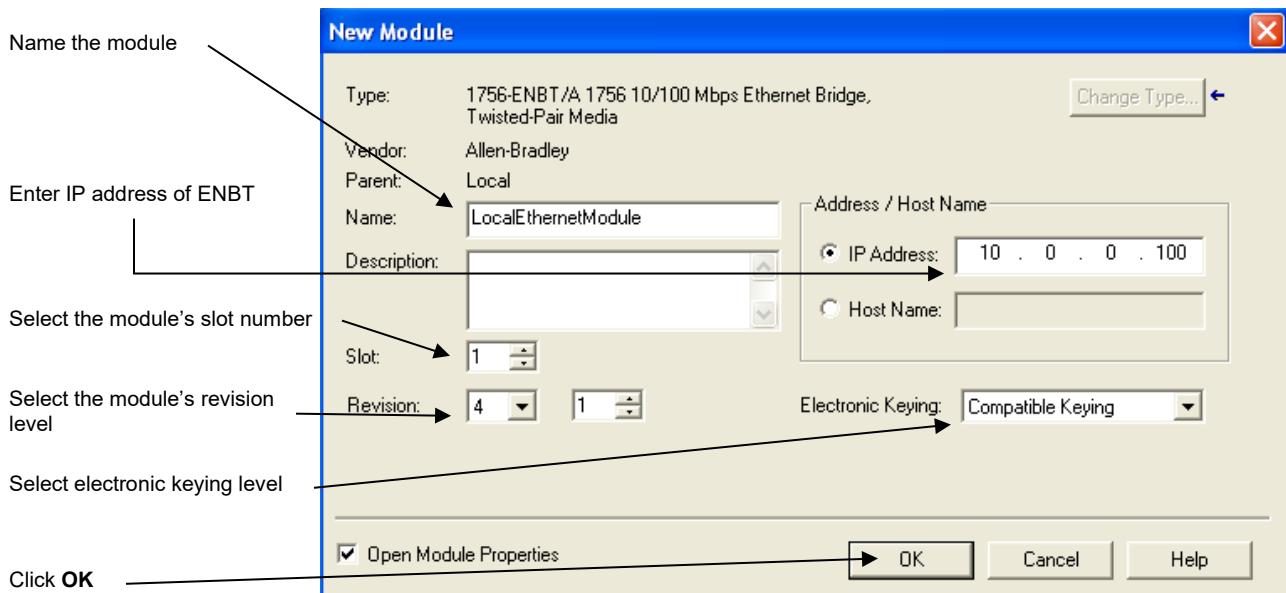


#### 3.3.2 Add a Remote Ethernet Flex Adapter


After you have added the local Ethernet communication module, you must add remote Ethernet communication modules. A remote Ethernet module is a module that resides in a separate chassis from the controller.

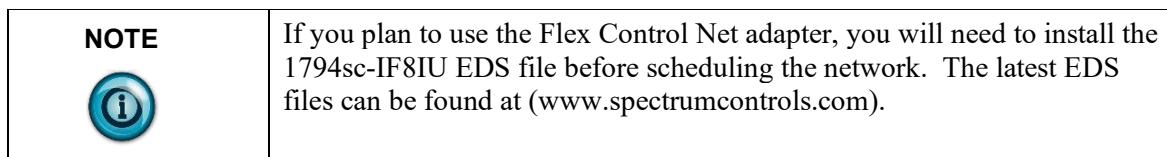


1. Select **New Module** for the I/O Configuration.

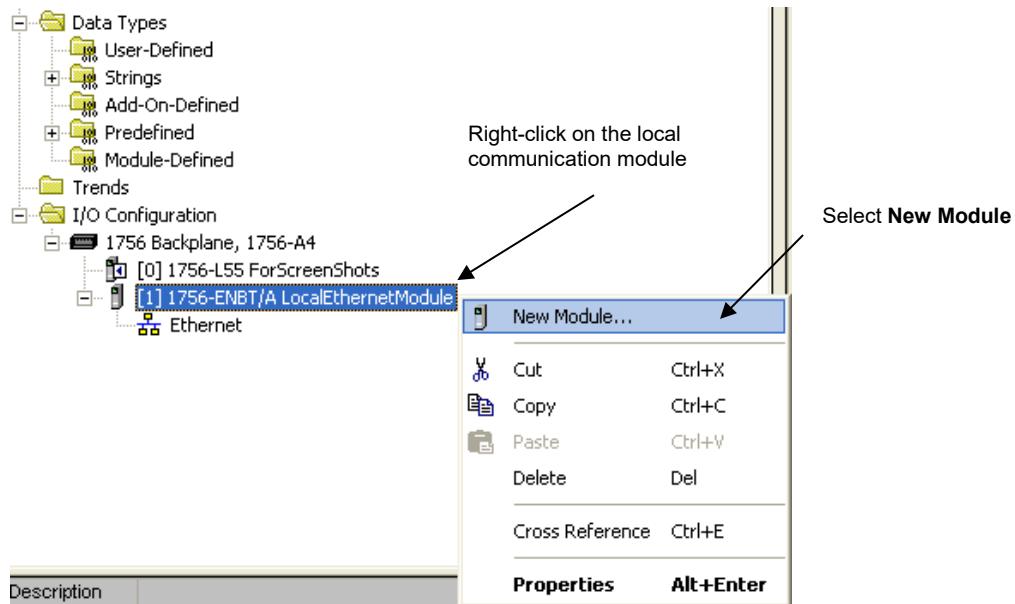

2. Select the module type from the **Select Module Type** popup.

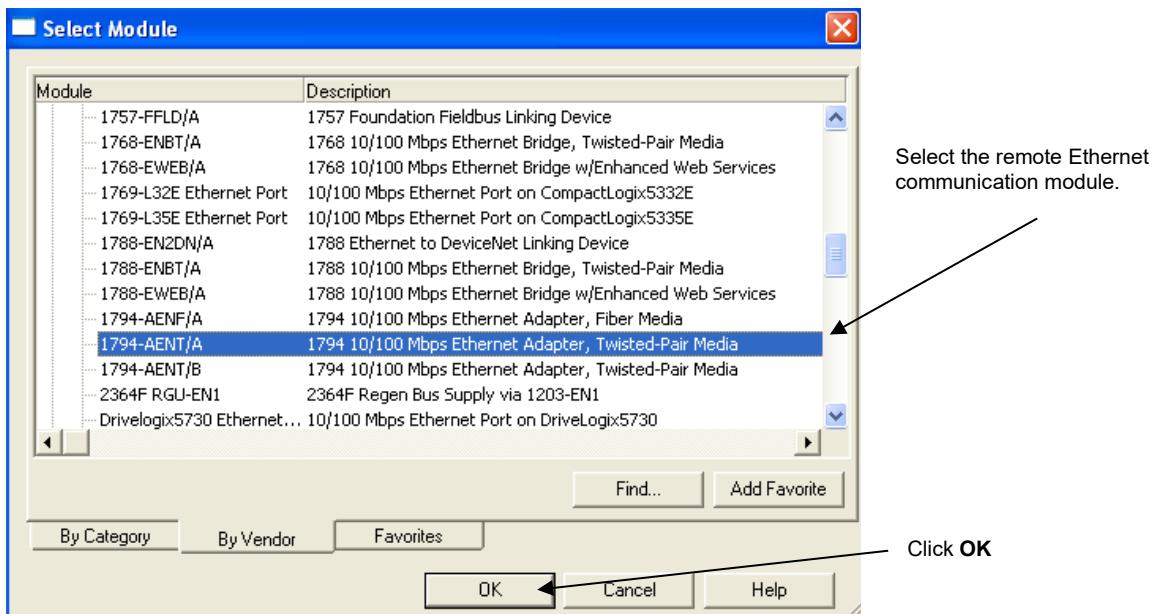


3. Configure the remote Ethernet communication module.

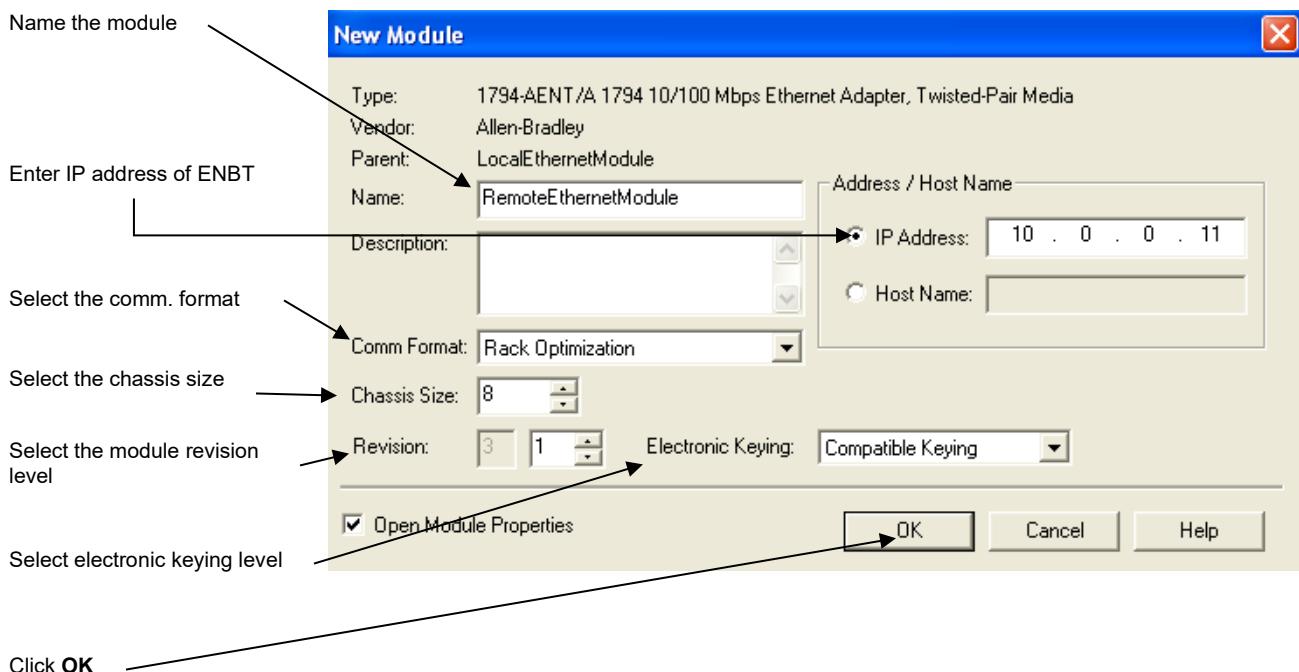


### 3.3.3 Add the Generic Flex Module

After adding the remote Ethernet communication module, the Generic Flex Module must be added. The Generic Flex Module is required because there is no custom profile for the 1794sc-IF8IU module. The following steps must be followed to add the Generic Flex Module.


- Select **New Module** for the I/O Configuration.

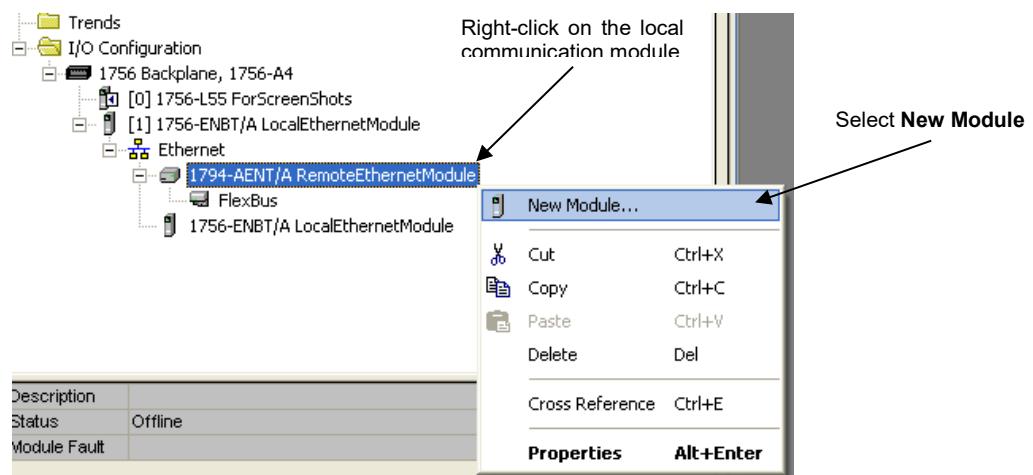

2. Select the module type from the **Select Module Type** popup.

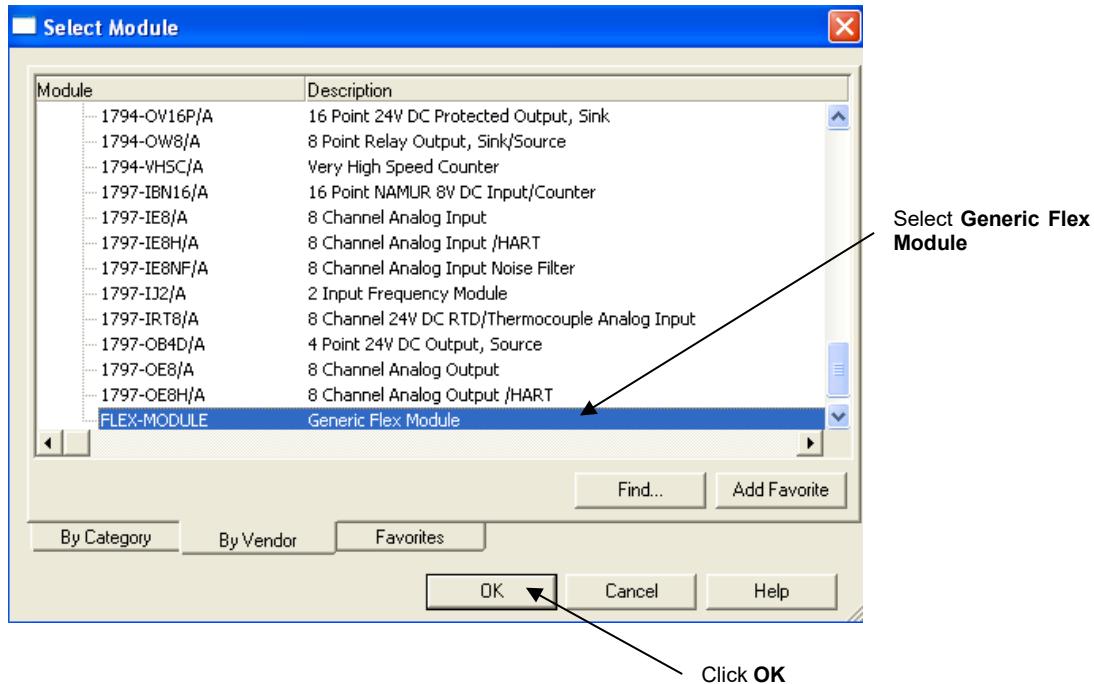

3. Configure the Generic Flex Module (i.e. 1794sc-IF8IU)

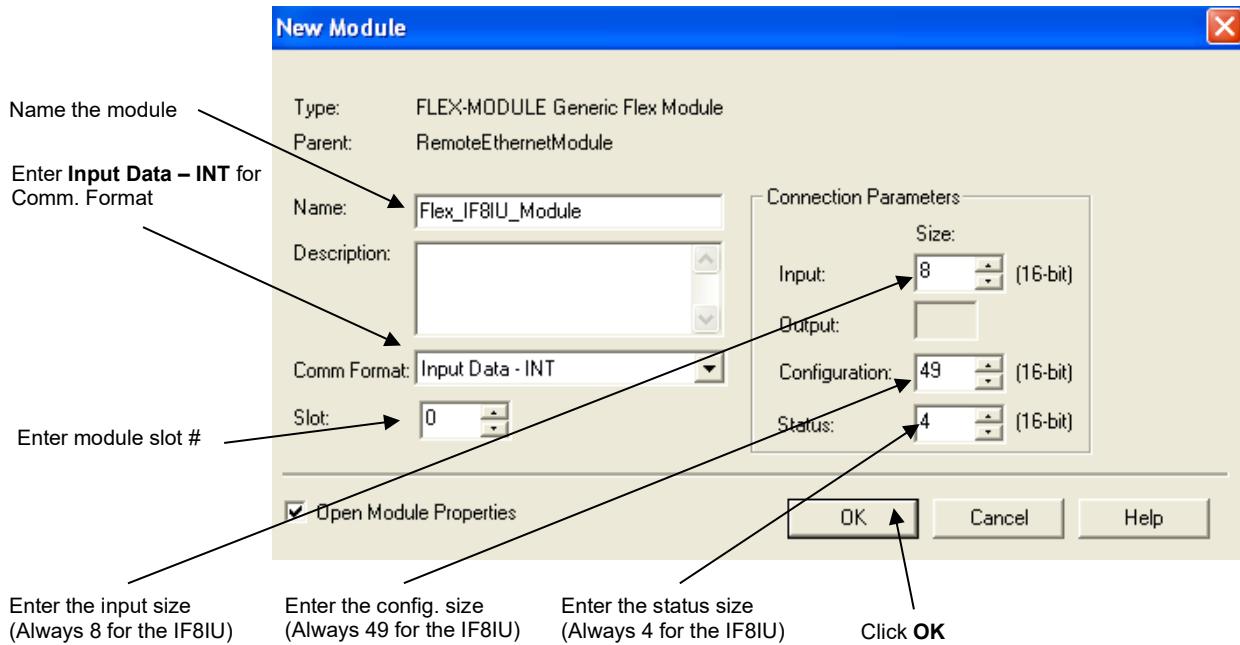

## Section 3.4 Module Configuration

The addition of the Generic Flex Module profile makes it possible to enter the configuration data for the IF8IU module. The configuration tags for the IF8IU are located under the controller tags. The following figure describes the tag

structure allocated by the Generic Flex Module profile.

**[Name of remote communication module]:e:x.Data[0 to 184]**


e = IF8IU slot number

x = Image Type (i.e. C, I, or O)

<b>NOTE</b>	185 words are allocated by the Generic Flex Module profile, but only 49 are actually used by the IF8IU module for configuration.
-------------	--

In the example above, the configuration tags for the first IF8IU module would appear as shown in the image below.

**Figure 3-2. Configuration Tags Example**

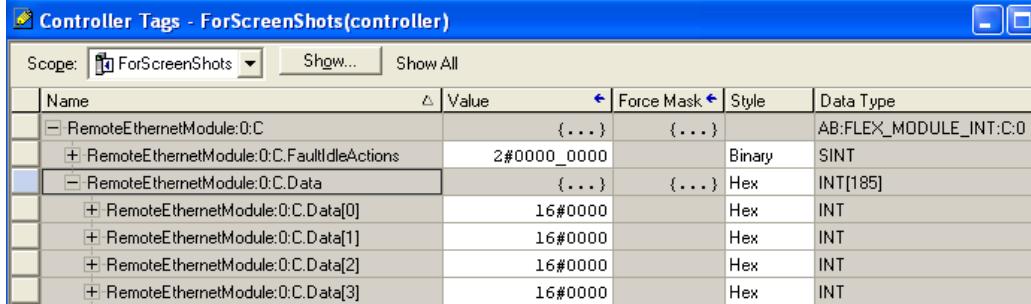

<b>NOTE</b>	The slot number is <b>0</b> and the Image type is <b>C</b> for configuration.
-------------	---

The following table describes the configuration settings for the 1794sc-IF8IU module.

**Table 3-1. Configuration Table**

Usage (16 bit words):																
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
C:0	R <sup>1</sup>	R <sup>1</sup>	F7	F6	F5	F4	R <sup>1</sup>		R <sup>1</sup>	R <sup>1</sup>	F3	F2	F1	F0	R <sup>1</sup>	
C:1	Temp Units Ch0	Disable CJC Ch0	Open Circuit Ch0		R <sup>1</sup>	Data Format Ch0			Input Filter Ch0			Input Type CH0				
C:2	Temp Units Ch1	Disable CJC Ch1	Open Circuit Ch1		R <sup>1</sup>	Data Format Ch1			Input Filter Ch1			Input Type CH1				

	<b>Usage (16 bit words):</b>															
	<b>15</b>	<b>14</b>	<b>13</b>	<b>12</b>	<b>11</b>	<b>10</b>	<b>9</b>	<b>8</b>	<b>7</b>	<b>6</b>	<b>5</b>	<b>4</b>	<b>3</b>	<b>2</b>	<b>1</b>	<b>0</b>
C:0	R <sup>1</sup>	R <sup>1</sup>	F7	F6	F5	F4	R <sup>1</sup>		R <sup>1</sup>	R <sup>1</sup>	F3	F2	F1	F0	R <sup>1</sup>	
C:3	Temp Units Ch2	Disable CJC Ch2	Open Circuit Ch2		R <sup>1</sup>	Data Format Ch2		Input Filter Ch2			Input Type CH2					
C:4	Temp Units Ch3	Disable CJC Ch3	Open Circuit Ch3		R <sup>1</sup>	Data Format Ch3		Input Filter Ch3			Input Type CH3					
C:5	Temp Units Ch4	Disable CJC Ch4	Open Circuit Ch4		R <sup>1</sup>	Data Format Ch4		Input Filter Ch4			Input Type CH4					
C:6	Temp Units Ch5	Disable CJC Ch5	Open Circuit Ch5		R <sup>1</sup>	Data Format Ch5		Input Filter Ch5			Input Type CH5					
C:7	Temp Units Ch6	Disable CJC Ch6	Open Circuit Ch6		R <sup>1</sup>	Data Format Ch6		Input Filter Ch6			Input Type CH6					
C:8	Temp Units Ch7	Disable CJC Ch7	Open Circuit Ch7		R <sup>1</sup>	Data Format Ch7		Input Filter Ch7			Input Type CH7					
C:9	CH0 User Low Alarm Threshold															
C:10	CH0 User High Alarm Threshold															
C:11	CH0 User Alarm Deadband															
C:12	CH1 User Low Alarm Threshold															
C:13	CH1 User High Alarm Threshold															
C:14	CH1 User Alarm Deadband															
C:15	CH2 User Low Alarm Threshold															
C:16	CH2 User High Alarm Threshold															
C:17	CH2 User Alarm Deadband															
C:18	CH3 User Low Alarm Threshold															
C:19	CH3 User High Alarm Threshold															
C:20	CH3 User Alarm Deadband															
C:21	CH4 User Low Alarm Threshold															
C:22	CH4 User High Alarm Threshold															
C:23	CH4 User Alarm Deadband															
C:24	CH5 User Low Alarm Threshold															
C:25	CH5 User High Alarm Threshold															

	<b>Usage (16 bit words):</b>															
	<b>15</b>	<b>14</b>	<b>13</b>	<b>12</b>	<b>11</b>	<b>10</b>	<b>9</b>	<b>8</b>	<b>7</b>	<b>6</b>	<b>5</b>	<b>4</b>	<b>3</b>	<b>2</b>	<b>1</b>	<b>0</b>
C:0	R <sup>1</sup>	R <sup>1</sup>	F7	F6	F5	F4	R <sup>1</sup>	R <sup>1</sup>	R <sup>1</sup>	F3	F2	F1	F0	R <sup>1</sup>		
C:26 CH5 User Alarm Deadband																
C:27 CH6 User Low Alarm Threshold																
C:28 CH6 User High Alarm Threshold																
C:29 CH6 User Alarm Deadband																
C:30 CH7 User Low Alarm Threshold																
C:31 CH7 User High Alarm Threshold																
C:32 CH7 User Alarm Deadband																
C:33 CH0_Cal_Offset																
C:34 CH1_Cal_Offset																
C:35 CH2_Cal_Offset																
C:36 CH3_Cal_Offset																
C:37 CH4_Cal_Offset																
C:38 CH5_Cal_Offset																
C:39 CH6_Cal_Offset																
C:40 CH7_Cal_Offset																
C:41 CH0_CJC_Offset																
C:42 CH1_CJC_Offset																
C:43 CH2_CJC_Offset																
C:44 CH3_CJC_Offset																
C:45 CH4_CJC_Offset																
C:46 CH5_CJC_Offset																
C:47 CH6_CJC_Offset																
C:48 CH7_CJC_Offset																
'Reserved set to zero																

### 3.4.1 Fault Mode [Word 0 (Bits 2, 3, 4, 5, 10, 11, 12, 13)]

The fault mode bits are used to enable or disable “broken wire detection”. See table below.

**Table 3-2. Fault Mode**

State	Function
0	Disabled
1	Enable Broken Wire Detection

### 3.4.2 Input Type [Words 1 – 8 (Bits 0 to 4)]

Use the table below to select the input type for each channel.

**Table 3-3. Input Type**

<b>Bit 4</b>	<b>Bit 3</b>	<b>Bit 2</b>	<b>Bit 1</b>	<b>Bit 0</b>	<b>Range:</b>
0	0	0	0	0	B Type Thermocouple
0	0	0	0	1	C Type Thermocouple
0	0	0	1	0	E Type Thermocouple
0	0	0	1	1	J Type Thermocouple
0	0	1	0	0	K Type Thermocouple
0	0	1	0	1	N Type Thermocouple
0	0	1	1	0	R Type Thermocouple
0	0	1	1	1	S Type Thermocouple
0	1	0	0	0	T Type Thermocouple
0	1	0	0	1	100 $\Omega$ Pt $\alpha$ 0.385
0	1	0	1	0	200 $\Omega$ Pt $\alpha$ 0.385
0	1	0	1	1	500 $\Omega$ Pt $\alpha$ 0.385
0	1	1	0	0	1000 $\Omega$ Pt $\alpha$ 0.385
0	1	1	0	1	100 $\Omega$ Pt $\alpha$ 0.3916
0	1	1	1	0	200 $\Omega$ Pt $\alpha$ 0.3916
0	1	1	1	1	500 $\Omega$ Pt $\alpha$ 0.3916
1	0	0	0	0	1000 $\Omega$ Pt $\alpha$ 0.3916
1	0	0	0	1	10 $\Omega$ Cu $\alpha$ 0.426
1	0	0	1	0	100 $\Omega$ Ni $\alpha$ 0.618
1	0	0	1	1	120 $\Omega$ Ni $\alpha$ 0.672
1	0	1	0	0	604 $\Omega$ NiFe $\alpha$ 0.518
1	0	1	0	1	R 0 to 150 $\Omega$
1	0	1	1	0	R 0 to 1000 $\Omega$
1	0	1	1	1	R 0 to 3000 $\Omega$
1	1	0	0	0	$\pm$ 50 mV
1	1	0	0	1	$\pm$ 100 mV
1	1	0	1	0	0 to 5 V
1	1	0	1	1	1 to 5 V
1	1	1	0	0	$\pm$ 10 V
1	1	1	0	1	0 to 10 V
1	1	1	1	0	4 to 20 mA
1	1	1	1	1	0 to 20 mA

**3.4.3 Input Filter [Words 1 – 8 (Bits 5 to 7)]**

Use the table below to select the appropriate filter for each channel.

**Table 3-4. Filter Settings**

<b>Bit 7</b>	<b>Bit 6</b>	<b>Bit 5</b>	<b>ADC Filter:</b>
0	0	0	4.17 Hz
0	0	1	10.0 Hz
0	1	0	16.7 Hz
0	1	1	19.6 Hz
1	0	0	62.0 Hz
1	0	1	470.0 Hz
1	1	0	*Unused
1	1	1	*Unused

**3.4.4 Data Format [Words 1 – 8 (Bits 8 to 10)]**

Select the appropriate data type for each channel using the table below. Refer to Table 3-6 for data type ranges.

**Table 3-5. Data Format**

<b>Bit 10</b>	<b>Bit 9</b>	<b>Bit 8</b>	<b>Format:</b>
0	0	0	Engineering Units
0	0	1	Engineering Units ×10
0	1	0	Raw/Proportional Counts
0	1	1	Scaled for PID
1	0	0	Percent of Full Scale
1	0	1	<sup>1</sup> CJC EU
1	1	0	<sup>1</sup> CJC Scaled for PID
1	1	1	<sup>1</sup> CJC Percent of Full Scale

<sup>1</sup> If selected, the CJC format will override all ranges/formats and report the indicated CJC value for this channel. Channel zero will report CJC0 directly. Channel 7 will report CJC1 directly. All others will be distributed values between CJC0 and CJC1, based on channel position.

**Table 3-6. Data Ranges**

<b>Input Type</b>	<b>Range</b>	<b>Eng. Units</b>	<b>Eng Units ×10</b>	<b>Raw/Prop</b>	<b>PID</b>	<b>Percent</b>
B Type Thermocouple	300 to 1820 °C (572 to 3308 °F)	3000 to 18200 (5720 to 32767)	300 to 1820 (572 to 3308)	-32768 to 32767	0 to 16383	0 to 10000
C Type Thermocouple	0 to 2315 °C (32 to 4199 °F)	0 to 23150 (320 to 32767)	0 to 2315 (32 to 4199)	-32768 to 32767	0 to 16383	0 to 10000
E Type Thermocouple	-270 to 1000 °C (-454 to 1832 °F)	-2700 to 10000 (-4540 to 18320)	-270 to 1000 (-454 to 1832)	-32768 to 32767	0 to 16383	0 to 10000
J Type Thermocouple	-210 to 1200 °C (-346 to 2192 °F)	-2100 to 12000 (-3460 to 21920)	-210 to 1200 (-346 to 2192)	-32768 to 32767	0 to 16383	0 to 10000
K Type Thermocouple	-270 to 1370 °C (-454 to 2498 °F)	-2700 to 13700 (-4540 to 24980)	-270 to 1370 (-454 to 2498)	-32768 to 32767	0 to 16383	0 to 10000

Input Type	Range	Eng. Units	Eng Units ×10	Raw/Prop	PID	Percent
N Type Thermocouple	-210 to 1300 °C (-346 to 2372 °F)	-2100 to 13000 (-3460 to 23720)	-210 to 1300 (-346 to 2372)	-32768 to 32767	0 to 16383	0 to 10000
R Type Thermocouple	0 to 1768 °C (32 to 3214 °F)	0 to 17680 (320 to 3214)	0 to 1768 (32 to 32144)	-32768 to 32767	0 to 16383	0 to 10000
S Type Thermocouple	0 to 1768 °C (32 to 3214 °F)	0 to 17680 (320 to 3214)	0 to 1768 (32 to 32144)	-32768 to 32767	0 to 16383	0 to 10000
T Type Thermocouple	-270 to 400 °C (-270 to 752 °F)	-2700 to 4000 (-2700 to 7520)	-270 to 400 (-270 to 752)	-32768 to 32767	0 to 16383	0 to 10000
100 Ω Pt α 0.385	-200 to 850 °C (-328 to 1562 °F)	-2000 to 8500 (-3280 to 15620)	-200 to 850 (-328 to 1562)	-32768 to 32767	0 to 16383	0 to 10000
200 Ω Pt α 0.385	-200 to 850 °C (-328 to 1562 °F)	-2000 to 8500 (-3280 to 15620)	-200 to 850 (-328 to 1562)	-32768 to 32767	0 to 16383	0 to 10000
500 Ω Pt α 0.385	-200 to 850 °C (-328 to 1562 °F)	-2000 to 8500 (-3280 to 15620)	-200 to 850 (-328 to 1562)	-32768 to 32767	0 to 16383	0 to 10000
1000 Ω Pt α 0.385	-200 to 850 °C (-328 to 1562 °F)	-2000 to 8500 (-3280 to 15620)	-200 to 850 (-328 to 1562)	-32768 to 32767	0 to 16383	0 to 10000
100 Ω Pt α 0.3916	-200 to 630 °C (-328 to 1166 °F)	-2000 to 6300 (-3280 to 11660)	-200 to 630 (-328 to 1166)	-32768 to 32767	0 to 16383	0 to 10000
200 Ω Pt α 0.3916	-200 to 630 °C (-328 to 1166 °F)	-2000 to 6300 (-3280 to 11660)	-200 to 630 (-328 to 1166)	-32768 to 32767	0 to 16383	0 to 10000
500 Ω Pt α 0.3916	-200 to 630 °C (-328 to 1166 °F)	-2000 to 6300 (-3280 to 11660)	-200 to 630 (-328 to 1166)	-32768 to 32767	0 to 16383	0 to 10000
1000 Ω Pt α 0.3916	-200 to 630 °C (-328 to 1166 °F)	-2000 to 6300 (-3280 to 11660)	-200 to 630 (-328 to 1166)	-32768 to 32767	0 to 16383	0 to 10000
10 Ω Cu α 0.426	-100 to 260 °C (-148 to 500 °F)	-1000 to 2600 (-1480 to 5000)	-100 to 260 (-148 to 500)	-32768 to 32767	0 to 16383	0 to 10000
100 Ω Ni α 0.618	-100 to 260 °C (-148 to 500 °F)	-1000 to 2600 (-1480 to 5000)	-100 to 260 (-148 to 500)	-32768 to 32767	0 to 16383	0 to 10000
120 Ω Ni α 0.672	-80 to 260 °C (-112 to 500 °F)	-800 to 2600 (-1120 to 5000)	-80 to 260 (-112 to 500)	-32768 to 32767	0 to 16383	0 to 10000
604 Ω NiFe α 0.518	-100 to 200 °C (-148 to 392 °F)	-1000 to 2000 (-1480 to 3920)	-100 to 200 (-148 to 392)	-32768 to 32767	0 to 16383	0 to 10000
Resistance	0 to 150 Ω	0 to 15000	0 to 1500	-32768 to 32767	0 to 16383	0 to 10000
	0 to 1000 Ω	0 to 10000	0 to 1000	-32768 to 32767	0 to 16383	0 to 10000
	0 to 3000 Ω	0 to 30000	0 to 3000	-32768 to 32767	0 to 16383	0 to 10000
Voltage	+/- 50 mV	-5000 to 5000	-500 to 500	-32768 to 32767	0 to 16383	0 to 10000
	+/- 100 mV	-10000 to 10000	-1000 to 1000	-32768 to 32767	0 to 16383	0 to 10000
	0 to 5 V	0 to 5000	0 to 500	0 to 31207	0 to 16383	0 to 10000
	1 to 5 V	1000 to 5000	100 to 500	6242 to 31207	0 to 16383	0 to 10000
	+/- 10 V	-10000 to 10000	-1000 to 1000	-31207 to 31207	0 to 16383	0 to 10000
Current	0 to 10 V	0 to 10000	0 to 1000	0 to 31207	0 to 16383	0 to 10000
	4 to 20 mA	4000 to 20000	400 to 2000	6241 to 31207	3277 to 16383	2000 to 10000
	0 to 20 mA	0 to 20000	0 to 2000	0 to 31207	0 to 16383	0 to 10000

### 3.4.5 Open Circuit Mode [Words 1 – 8 (Bits 12 and 13)]

The open circuit mode determines the fail-safe data value each channel is to default to in the event of an open circuit condition. The table below lists the available options.

**Table 3-7. Open Circuit Mode**

Bit 13	Bit 12	Open Circuit Mode:
0	0	Zero analog value on broken input.
0	1	Set analog value to Max scale on broken input.
1	0	Set analog value to Min scale on broken input.
1	1	Previous Value.

### 3.4.6 Disable CJC [Words 1 – 8 (Bit 14)]

This bit is used to disable CJC compensation for the associated channel.

**Table 3-8. Disable CJC**

State	Function
0	CJCs Enabled <sup>1</sup>
1	CJCs Disabled <sup>1</sup>

<sup>1</sup>This field is only used if the input type is a thermocouple and the format is not a CJC format. No compensation is performed on the thermocouple when disabled.

### 3.4.7 Temperature Units [Words 1 – 8 (Bit 15)]

This bit enables Celsius or Fahrenheit for the associated channel.

<b>NOTE</b> 	If the associated channel is not configured for an RTD or thermocouple, the temperature units have no effect.
--	---

**Table 3-9. Temperature Units**

State	Function
0	Degrees C
1	Degrees F

### 3.4.8 Low Alarm Threshold [Words 9, 12, 15, 18, 21, 24, 2, 30]

Low alarm threshold setting for channels 0 through 7, respectively.

<b>NOTE</b> 	The data range is determined by the data format selected.
--	---

### 3.4.9 High Alarm Threshold [Words 10, 13, 16, 19, 22, 25, 28, 31]

High alarm threshold setting for channels 0 through 7, respectively.

**NOTE**


The data range is determined by the data format selected.

### 3.4.10 User Alarm Deadband [Words 11, 14, 17, 20, 23, 26, 29, 32]

The deadband is a range through which the measured input may be varied without initiating an alarm response. The deadband setting must adhere to the following rules:

- The deadband must be greater or equal to zero.
- The deadband cannot exceed 25% of full scale.
- The alarm limits including deadband may not exceed the user range limits.
- The low alarm including deadband may not overlap the high alarm including deadband.

If any of these rules are violated, a configuration error is declared, and the alarm is disabled. The notable exception is when the “low” is equal to the “high” and both are set to zero. In this case, user alarms are disabled, the deadband is ignored, and no fault is declared.


**NOTE**


The data range is determined by the data format selected.

The alarm deadband allows the user to define hysteresis for alarms. The alarm set threshold may differ from the alarm clear threshold, depending on the deadband, as illustrated below. A value must transition through the indicated threshold (see dashed arrows) to have the indicated effect.

If a CJC format is selected, the alarm limits apply to that CJC format, not to that channel’s analog input.

**Figure 3-3. Alarm Deadband**

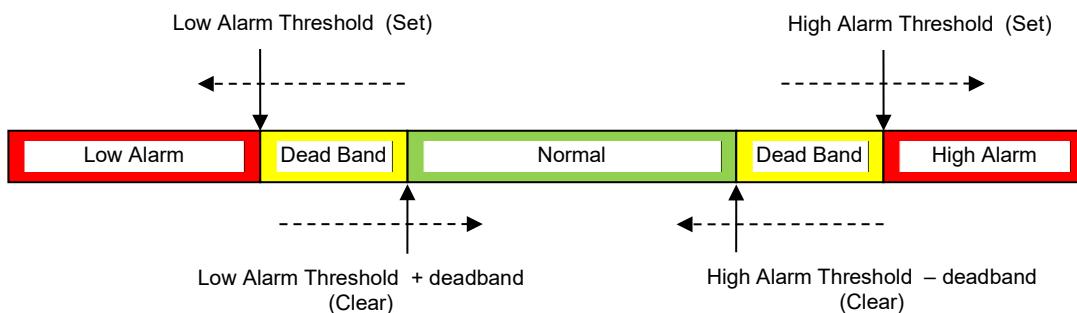

### 3.4.11 Calibration Offset [Words 33 to 40]

The calibration offset value is added to the channel data value. This value may be up to  $\pm 20\%$  of full scale for the selected range and format or a configuration error will be declared.

Example:  $\pm 10$  V EU

$$(10000 - -1000) = 20000$$

$$20000 \times 0.20 = 4000$$

Cal offset may be between -4000 to + 4000.

It must be in the same range and format as the selected channel data and will be added to the final result post scaling.

**NOTE**



If a CJC format is selected, the cal offset is ignored.

### 3.4.12 CJC Offset [Words 41 to 48]

The CJC offset is added to the CJC temperature value before using it to correct the thermocouple value or final scaling for CJC formats.

The CJC offset must be within  $\pm 20\%$  of the CJC full scale:

(-25 °C (-2500) to 85 °C (8500)) or a configuration error will be declared.

$$8,500 - -2,500 \text{ C} = 11,000$$

$$11,000 \times 0.20 = 2,200.$$

CJC offset may be between -2,200 to +2,200.

It must be formatted in degrees C multiplied by 100.

Example: For a 1 °C offset,  $1 \text{ }^{\circ}\text{C} \times 100 = 100$ .

## Section 3.5 Read Input and Status Data

Input and status data is read for each channel, converted to a scaled digital value, and stored in the controller tags. The following figure describes the tag structure allocated by the Generic Flex Module profile.

[Name of remote communication module]:e:x.Data[0 to 184]

e = IF8IU slot number

x = Image Type (i.e. C, I, or O)

Using the remote Ethernet adapter example, the input/status tags would appear under the controller tags as shown in the figure below.

**Figure 3-4. Input/Status Tags**

Controller Tags - ForScreenShots(controller)					
Scope:	ForScreenShots	Show...	Show All		
Name	Value	Force Mask	Style	Data Type	
+ RemoteEthernetModule:0:C	{...}	{...}		AB:FLEX_MODULE_INT:C:0	
+ RemoteEthernetModule:1	{...}	{...}		AB:1794_AEN_8 SLOT:I:0	
+ RemoteEthernetModule:0	{...}	{...}		AB:1794_AEN_8 SLOT:O:0	
- RemoteEthernetModule:0:I	{...}	{...}		AB:FLEX_MODULE_INT_28Bytes:I:0	
+ RemoteEthernetModule:0:I.Fault	2#0000_0000_...		Binary	DINT	
- RemoteEthernetModule:0:I.Data	{...}	{...}	Decimal	INT[12]	
+ RemoteEthernetModule:0:I.Data[0]	0		Decimal	INT	
+ RemoteEthernetModule:0:I.Data[1]	0		Decimal	INT	
+ RemoteEthernetModule:0:I.Data[2]	0		Decimal	INT	
+ RemoteEthernetModule:0:I.Data[3]	0		Decimal	INT	
+ RemoteEthernetModule:0:I.Data[4]	0		Decimal	INT	
+ RemoteEthernetModule:0:I.Data[5]	0		Decimal	INT	
+ RemoteEthernetModule:0:I.Data[6]	0		Decimal	INT	
+ RemoteEthernetModule:0:I.Data[7]	0		Decimal	INT	
+ RemoteEthernetModule:0:I.Data[8]	0		Decimal	INT	
+ RemoteEthernetModule:0:I.Data[9]	0		Decimal	INT	
+ RemoteEthernetModule:0:I.Data[10]	0		Decimal	INT	
+ RemoteEthernetModule:0:I.Data[11]	0		Decimal	INT	

**NOTE**



The slot number is **0** and the image type is **I**.

The table below describes the input and status mapping.

**Table 3-10. Input & Status**

Usage (16 bit words):																
I:0	Channel 0 input Data.															
I:1	Channel 1 input Data.															
I:2	Channel 2 input Data.															
I:3	Channel 3 input Data.															
I:4	Channel 4 input Data.															
I:5	Channel 5 input Data.															
I:6	Channel 6 input Data.															
I:7	Channel 7 input Data.															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
S:0	OverRange (CH0/Bit 8, CH1/Bit 9, ...)												<sup>4</sup> UnderRange (CH0/Bit 0, CH1/Bit 1, ...)			
S:1	<sup>5</sup> User HI Alarms (CH0/Bit8, CH1/Bit9, ...)												<sup>5</sup> User LO Alarms (CH0/Bit0, CH1/Bit1, ...)			
S:2	Reserved								CJC Alarm	<sup>6,4</sup> Open Circuit Alarms (CH0/Bit0, CH1/Bit1, ...)						
S:3	Reserved												Diagnostic Code (See )			

### 3.5.1 Input Data [Words 0 to 7]

Words 0 through 7 display the digital value for channel inputs 0 through 7, respectively. Scaling/range is determined by the data format selected. See 3.4.4 for more details.

### 3.5.2 UnderRange Alarms [Word 8 (Bits 0 to 7)]

The under range flag is set for the associated channel when the channel data value is below the minimum scale for the selected range.

### 3.5.3 OverRange Alarm [Word 8 (Bits 8 to 15)]

The over range flag is set for the associated channel when the channel data value is above the maximum scale for the selected range.

### 3.5.4 User Low Alarm [Word 9 (Bits 0 to 7)]

The user low alarm flag is set for the associated channel when the channel data

<sup>4</sup> For the 0 to 20 mA range, a zero reading is valid. Therefore, under range will not trigger at the low terminus of zero but will instead trigger when the signal goes negative at or below 2.5% of full scale.  $20 - 0 = 20$ .  $-0.025 \times 20 = -0.5$  mA.

<sup>5</sup> Channel-specific range alarms will apply to CJC values if a CJC format is selected for that channel.

<sup>6</sup> Channel-specific open circuit alarm will not be set if a CJC format is selected for that channel.

value is below the user low alarm threshold.

### 3.5.5 User High Alarm [Word 9 (Bits 8 to 15)]

The user high alarm flag is set for the associated channel when the channel data value is above the user high alarm threshold.

### 3.5.6 Open Circuit Alarm [Word 10 (Bits 0 to 7)]

If set, the associated channel has detected a shorted or open circuit condition.

### 3.5.7 CJC Alarm [Word 10 (Bits 8 & 9)]

The CJC alarm indicates a broken wire condition for both CJC sensors. Refer to the table below.

**Table 3-11. CJC Alarms**

Bit 9	Bit 8	CJC Alarm:
0	0	No Errors
0	1	CJC1 is broken.
1	0	CJC2 is broken.
1	1	Both CJC1 and CJC2 are broken.

### 3.5.8 Diagnostics [Word 11 (Bits 0 to 7)]

The diagnostic byte is used to indicate module faults. Refer to the table below for more information.

**Table 3-12. Diagnostics**

Hex Error Code:	Diagnostic:
0x00	NO_ERRORS
0x10	CH0_RANGE_CFG_ERROR
0x11	CH1_RANGE_CFG_ERROR
0x12	CH2_RANGE_CFG_ERROR
0x13	CH3_RANGE_CFG_ERROR
0x14	CH4_RANGE_CFG_ERROR
0x15	CH5_RANGE_CFG_ERROR
0x16	CH6_RANGE_CFG_ERROR
0x17	CH7_RANGE_CFG_ERROR
0x20	CH0_FORMAT_CFG_ERROR
0x21	CH1_FORMAT_CFG_ERROR
0x22	CH2_FORMAT_CFG_ERROR
0x23	CH3_FORMAT_CFG_ERROR
0x24	CH4_FORMAT_CFG_ERROR
0x25	CH5_FORMAT_CFG_ERROR
0x26	CH6_FORMAT_CFG_ERROR

<b>Hex Error Code:</b>	<b>Diagnostic:</b>
0x27	CH7_FORMAT_CFG_ERROR
0x30	CH0_FILTER_CFG_ERROR
0x31	CH1_FILTER_CFG_ERROR
0x32	CH2_FILTER_CFG_ERROR
0x33	CH3_FILTER_CFG_ERROR
0x34	CH4_FILTER_CFG_ERROR
0x35	CH5_FILTER_CFG_ERROR
0x36	CH6_FILTER_CFG_ERROR
0x37	CH7_FILTER_CFG_ERROR
0x40	CH0_HI_LO_ALARM_CFG_ERROR
0x41	CH1_HI_LO_ALARM_CFG_ERROR
0x42	CH2_HI_LO_ALARM_CFG_ERROR
0x43	CH3_HI_LO_ALARM_CFG_ERROR
0x44	CH4_HI_LO_ALARM_CFG_ERROR
0x45	CH5_HI_LO_ALARM_CFG_ERROR
0x46	CH6_HI_LO_ALARM_CFG_ERROR
0x47	CH7_HI_LO_ALARM_CFG_ERROR
0x50	CH0_OUT_OF_RANGE_ERROR
0x51	CH1_OUT_OF_RANGE_ERROR
0x52	CH2_OUT_OF_RANGE_ERROR
0x53	CH3_OUT_OF_RANGE_ERROR
0x54	CH4_OUT_OF_RANGE_ERROR
0x55	CH5_OUT_OF_RANGE_ERROR
0x56	CH6_OUT_OF_RANGE_ERROR
0x57	CH7_OUT_OF_RANGE_ERROR
0x59	Unused module cfg bits set
0x5F	MODULE_NOT_CONFIGURED
0x60	CH0 Cal Offset CFG Error
0x61	CH1 Cal Offset CFG Error
0x62	CH2 Cal Offset CFG Error
0x63	CH3 Cal Offset CFG Error
0x64	CH4 Cal Offset CFG Error
0x65	CH5 Cal Offset CFG Error
0x66	CH6 Cal Offset CFG Error
0x67	CH7 Cal Offset CFG Error

<b>Hex Error Code:</b>	<b>Diagnostic:</b>
0×70	CH0 CJC Offset CFG Error
0×71	CH1 CJC Offset CFG Error
0×72	CH2 CJC Offset CFG Error
0×73	CH3 CJC Offset CFG Error
0×74	CH4 CJC Offset CFG Error
0×75	CH5 CJC Offset CFG Error
0×76	CH6 CJC Offset CFG Error
0×77	CH7 CJC Offset CFG Error
0×80	FIELD_PWR_FAULT
0×90	CH0_CAL_ERROR
0×91	CH1_CAL_ERROR
0×92	CH2_CAL_ERROR
0×93	CH3_CAL_ERROR
0×94	CH4_CAL_ERROR
0×95	CH5_CAL_ERROR
0×96	CH6_CAL_ERROR
0×97	CH7_CAL_ERROR
0×A0	CH0_IOCMM_FAILED
0×A1	CH1_IOCMM_FAILED
0×A2	CH2_IOCMM_FAILED
0×A3	CH3_IOCMM_FAILED
0×A4	CH4_IOCMM_FAILED
0×A5	CH5_IOCMM_FAILED
0×A6	CH6_IOCMM_FAILED
0×A7	CH7_IOCMM_FAILED
0×B0	CH0_BROKEN_INPUT
0×B1	CH1_BROKEN_INPUT
0×B2	CH2_BROKEN_INPUT
0×B3	CH3_BROKEN_INPUT
0×B4	CH4_BROKEN_INPUT
0×B5	CH5_BROKEN_INPUT
0×B6	CH6_BROKEN_INPUT
0×B7	CH7_BROKEN_INPUT
0×C0	CJC0_BROKEN_INPUT
0×C1	CJC1_BROKEN_INPUT

Hex Error Code:	Diagnostic:
0xC2	CJC_BOTH_BROKEN_INPUT

## Section 3.6 Technical Assistance

Note that your module contains electronic components which are susceptible to damage from electrostatic discharge (ESD). An electrostatic charge can accumulate on the surface of ordinary plastic wrapping or cushioning material. **In the unlikely event that the module should need to be returned to Spectrum Controls, Inc., please ensure that the unit is enclosed in approved ESD packaging (such as static-shielding / metalized bag or black conductive container).** Spectrum Controls, Inc. reserves the right to void the warranty on any unit that is improperly packaged for shipment.

RMA (Return Merchandise Authorization) form required for all product returns.

For further information or assistance, please contact your local distributor, or call the Spectrum Controls Technical Support at:

For Rockwell Automation-Compatible I/O Products:

- USA 1-440-646-6900
- United Kingdom 01-908-635-230
- Australia 1-800-809-929
- Mexico 001-888-365-8677
- Brazil 55-11-3618-8800
- Europe +49-211- 41553-630

## Section 3.7 Declaration of Conformity

Available upon request

# Appendix A

## Module Specifications

### General Specifications

Parameter	Specification																														
Number of inputs	8 channels																														
Module Location	Cat. No. 1794-TB3G, 1794-TB3GS Terminal Base Units																														
Nominal input voltage ranges	$\pm 50$ mV, $\pm 100$ mV, 0-5 V, 1-5 V, 0-10 V, and $\pm 10$ V																														
Nominal input current ranges	0-20 mA, 4-20 mA																														
Supported thermocouple types	<table><thead><tr><th>Type</th><th>°C Range</th><th>°F Range</th></tr></thead><tbody><tr><td>B</td><td>300 °C to 1820 °C</td><td>(572 °F to 3308 °F)</td></tr><tr><td>C</td><td>0 °C to 2315 °C</td><td>(32 °F to 4199 °F)</td></tr><tr><td>E</td><td>-270 °C to 1000 °C</td><td>(-454 °F to 1832 °F)</td></tr><tr><td>J</td><td>-210 °C to 1200 °C</td><td>(-346 °F to 2192 °F)</td></tr><tr><td>K</td><td>-270 °C to 1370 °C</td><td>(-454 °F to 2498 °F)</td></tr><tr><td>N</td><td>-210 °C to 1300 °C</td><td>(-346 °F to 2372 °F)</td></tr><tr><td>R</td><td>0 °C to 1768 °C</td><td>(32 °F to 3214 °F)</td></tr><tr><td>S</td><td>0 °C to 1768 °C</td><td>(32 °F to 3214 °F)</td></tr><tr><td>T</td><td>-270 °C to 400 °C</td><td>(-454 °F to 752 °F)</td></tr></tbody></table>	Type	°C Range	°F Range	B	300 °C to 1820 °C	(572 °F to 3308 °F)	C	0 °C to 2315 °C	(32 °F to 4199 °F)	E	-270 °C to 1000 °C	(-454 °F to 1832 °F)	J	-210 °C to 1200 °C	(-346 °F to 2192 °F)	K	-270 °C to 1370 °C	(-454 °F to 2498 °F)	N	-210 °C to 1300 °C	(-346 °F to 2372 °F)	R	0 °C to 1768 °C	(32 °F to 3214 °F)	S	0 °C to 1768 °C	(32 °F to 3214 °F)	T	-270 °C to 400 °C	(-454 °F to 752 °F)
Type	°C Range	°F Range																													
B	300 °C to 1820 °C	(572 °F to 3308 °F)																													
C	0 °C to 2315 °C	(32 °F to 4199 °F)																													
E	-270 °C to 1000 °C	(-454 °F to 1832 °F)																													
J	-210 °C to 1200 °C	(-346 °F to 2192 °F)																													
K	-270 °C to 1370 °C	(-454 °F to 2498 °F)																													
N	-210 °C to 1300 °C	(-346 °F to 2372 °F)																													
R	0 °C to 1768 °C	(32 °F to 3214 °F)																													
S	0 °C to 1768 °C	(32 °F to 3214 °F)																													
T	-270 °C to 400 °C	(-454 °F to 752 °F)																													

Parameter	Specification
Supported RTD/Resistance types	<p><b>RTD</b></p> <p>100 Ω Pt <math>\alpha = 0.385</math>  -200 °C to 850 °C (-328 °F to 1562 °F)</p> <p>200 Ω Pt <math>\alpha = 0.385</math>  -200 °C to 850 °C (-328 °F to 1562 °F)</p> <p>500 Ω Pt <math>\alpha = 0.385</math>  -200 °C to 850 °C (-328 °F to 1562 °F)</p> <p>1000 Ω Pt <math>\alpha = 0.385</math>  -200 °C to 850 °C (-328 °F to 1562 °F)</p> <p>100 Ω Pt <math>\alpha = 0.392</math>  -200 °C to 630 °C (-328 °F to 1166 °F)</p> <p>200 Ω Pt <math>\alpha = 0.392</math>  -200 °C to 630 °C (-328 °F to 166 °F)</p> <p>500 Ω Pt <math>\alpha = 0.392</math>  -200 °C to 630 °C (-328 °F to 1166 °F)</p> <p>1000 Ω Pt <math>\alpha = 0.392</math>  -200 °C to 630 °C (-328 °F to 1166 °F)</p> <p>10 Ω Cu <math>\alpha = 0.426</math>  -100 °C to 260 °C (-148 °F to 500 °F)</p> <p>100 Ω Ni <math>\alpha = 0.618</math>  -100 °C to 260 °C (-148 °F to 500 °F)</p> <p>120 Ω Ni <math>\alpha = 0.672</math>  -80 °C to 260 °C (-112 °F to 500 °F)</p> <p>604 Ω NiFe <math>\alpha = 0.518</math>  -100 °C to 200 °C (-148 °F to 392 °F)</p> <p><b>Resistance</b></p> <p>0 to 150 Ω  0 to 1000 Ω  0 to 3000 Ω</p>
Resolution	16 bits
Data format	Engineering Units ×1 Engineering Units ×10 Raw/Proportional Counts Scaled for PID Percent of full scale
Input Impedance	>1 Mohms for voltage, thermocouple, RTD, and resistance inputs 249 Ω ±1% for current inputs
Common mode rejection	60 dB at 5 V peak-to-peak, 50 Hz to 60 Hz



<b>Parameter</b>	<b>Specification</b>
Isolation voltage (continuous voltage withstand rating)	User power to Backplane: 24 VDC continuous Channel to Backplane: 24 VDC continuous Channel to Channel: 24 VDC continuous. Channel to User power: 24 VDC continuous
Open circuit protection	Open circuit detection bias <1 uA with ON/OFF capability
Overvoltage capability	Voltage mode ±24 VDC continuous (ten minutes) Current mode ±7.8 VDC continuous (ten minutes)
Cold junction compensation Range	-20 °C to 100 °C
Cold junction compensator	A-B catalog number 1794-CJC2
FlexBus current	80 mA
Power dissipation	7.25 W max at 31.2 VDC
Thermal dissipation	Max 10.2 BTU/hr. at 31.2 VDC
Key switch position	3
Voltage range Supply current	24 VDC nominal 240 mA at 24 VDC
Dimensions (with module installed in base) H × W × D approx.	94 × 94 × 69 mm (3.7 × 3.7 × 2.7 in.)

**Module Accuracy**

<b>Thermocouple Accuracy with 4.17 Hz filter using Linearization per ITS-90</b>	<b>Accuracy Limit At 25 °C 4.17 Hz Filter</b>	<b>Accuracy Limit At 0-55 °C 4.17 Hz Filter</b>	<b>Repeatability Limit At 25 °C &amp; 4.17 Hz filter</b>
Type J (-50 °C to 1200 °C):	±0.6 °C	±2.3 °C	±0.17 °C
Type J (-210 °C to -50 °C):	±0.8 °C	±3.3 °C	±0.25 °C
Type N (-80 °C to 1300 °C):	±1.0 °C	±1.5 °C	±0.3 °C
Type N (-250 °C to -80 °C):	±1.2 °C	±3.0 °C	±1.9 °C
Type T (-180 °C to 400 °C):	±1.0 °C	±1.5 °C	±0.2 °C
Type T (-270 °C to -180 °C):	±5.4 °C	±8.5 °C	±1.5 °C
Type K (-180 °C to 1370 °C):	±1.0 °C	±1.5 °C	±0.3 °C
Type K (-270 °C to -180 °C):	±7.5 °C	±11.5 °C	±3.6 °C
Type E (-130 °C to 1000 °C):	±0.5 °C	±1.5 °C	±0.1 °C
Type E (-270 °C to -130 °C):	±4.2 °C	±7.3 °C	±1.2 °C
Type C (0 °C to 2315 °C):	±1.8 °C	±3.5 °C	±0.9 °C
Type B (600 °C to 1800 °C):	±3.0 °C	±4.0 °C	±1 °C
Type B (300 °C to 600 °C):	±3.0 °C	±8.0 °C	±2 °C
Type S (140 °C to -1760 °C):	±1.7 °C	±2.6 °C	±0.55 °C
Type S (0 °C to 140 °C):	±1.7 °C	±5.0 °C	±1.0 °C
Type R (280 °C to -1760 °C):	±1.7 °C	±2.6 °C	±0.4 °C
Type R (0 °C to 280 °C):	±1.7 °C	±5.0 °C	±1.0 °C
CJC accuracy	±1.0 °C	3.0 °C	±0.8 °C
<b>Voltage Accuracy with 4.17 Hz filter</b>	<b>Accuracy Limit At 25 °C</b>	<b>Accuracy Limit At 0-55 °C</b>	<b>Repeatability Limit At 25 °C and 4.17 Hz filter</b>
±50 mV range	±20 uV	±35 uV	±10 uV
±100 mV range	±40 uV	±60 uV	±13 uV
0-5 V range	±2.5 mV	±5 mV	±1 mV
1-5 V range	±2.5 mV	±5 mV	±1 mV
0-10 V range	±5 mV	±10 mV	±1 mV
±10 V range	±10 mV	±20 mV	±1 mV
<b>Current Accuracy with 4.17 Hz filter</b>	<b>Accuracy Limit At 25 °C</b>	<b>Accuracy Limit At 0-55 °C</b>	<b>Repeatability Limit At 25 °C and 4.17 Hz filter</b>
0-20 mA range	±20 uA	±40 uA	±1 uA
4-20 mA range	±20 uA	±40 uA	±1 uA

<b>Resistance Accuracy with 4.17 Hz filter</b>	<b>Accuracy Limit At 25 °C</b>	<b>Accuracy Limit At 0-55 °C</b>	<b>Repeatability Limit At 25 °C and 4.17 Hz filter</b>
0-150 ohms range	±0.15 ohms	±0.25 ohms	±10 milliohms
0-1000 ohms range	±1.0 ohms	±2.0 ohms	±100 milliohms
0-3000 ohms range	±1.5 ohms	±2.5 ohms	±100 milliohms
<b>RTD Accuracy With 4.17 Hz filters</b>	<b>Accuracy °C Limit At 25 °C</b>	<b>Accuracy °C Limit At 0-55 °C</b>	<b>Repeatability Limit At 25C &amp; 4.17 Hz filter</b>
Platinum 385 (100, 200, 500 and 1000 ohms) (IEC751 1983, Amend 2 1995; JISC 1604 1997)	±0.7 °C	±1.2 °C	±0.1 °C
Platinum 3916 (100, 200, 500 and 1000 ohms) (JISC 1604: 1981)	±0.6 °C	±1.1 °C	±0.1 °C
Nickel 618 (100 ohms) (DIN 43760 Sept. 1987)	±0.3 °C	±0.5 °C	±0.1 °C
Nickel 672(120 ohms) (DIN 43760 Sept. 1987)	±0.3 °C	±0.5 °C	±0.1 °C
Nickel-Iron (518) (MINCO Application Aid #18, Date 5/90)	±0.4 °C	±0.7 °C	±0.1 °C
Copper 426 (10 ohms) (SAMA RC21-4-1966)	±2.4 °C	±2.8 °C	±0.1 °C

### Environmental Specifications

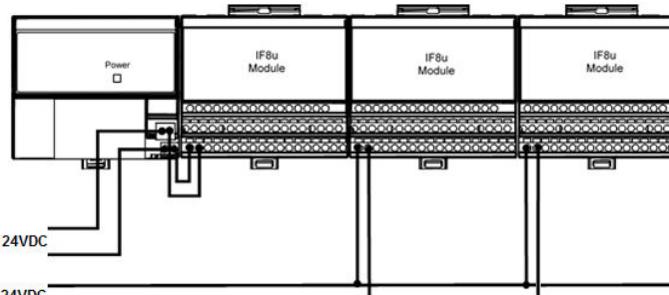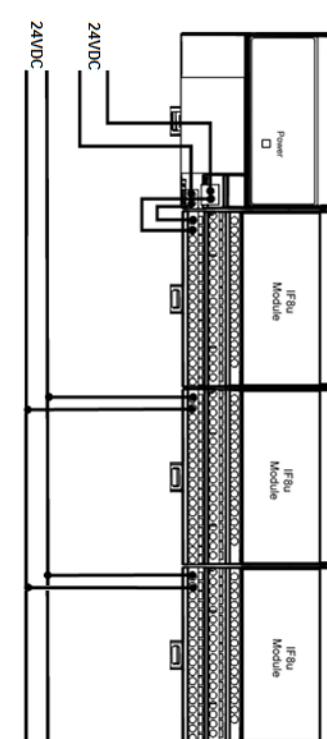Parameter	Industry Standards
Temperature, operating	<p>Tamb 0 ° C to 55 °C (-32 °F to 131 °F) This range applies only to modules installed horizontally as shown:</p>  <p>0 ° C to 45 °C (-32 °F to 113 °F) This range applies when modules are installed vertically. When installed vertically, it is recommended that the power supply be located on the top.</p> 
Temperature, storage	-40 ° C to 85 °C (-40 °F to 185 °F)
Relative humidity	IEC 60068-2-30 5 to 95% non-condensing
Vibration	IEC60068-2-6: 5 g at 10 to 500 Hz
Shock	IEC60068-2-27:
Operating	20 g
Non-operating	25 g

Parameter	Industry Standards
Emissions	IEC61000-6-4 CISPR 11: Group 1, Class A (with appropriate enclosure)
ESD immunity	IEC 61000-6-2: 6 kV contact discharges 8 kV air discharges
Radiated RF immunity	IEC 61000-6-2: 10 V/m with 1 kHz sinewave 80% AM from 30...2000 MHz 10 V/m with 200 Hz 50% Pulse 100% AM at 900 MHz 10 V/m with 200 Hz 50% Pulse 100% AM at 1890 MHz
EFT/B immunity	IEC 61000-6-2: ±2 kV at 5 kHz on signal ports
Surge transient immunity	IEC 61000-6-2: ±2 kV line-earth (CM) on shielded ports
Conducted RF immunity	IEC 61000-6-4: 10 VRMS with 1 kHz sinewave 80% AM from 150 kHz...80 MHz
Enclosure type rating	None (open style)
Signal conductors Thermocouple Millivolt Category <sup>7</sup>	Use appropriate shielded thermocouple wire <sup>8</sup> Belden 8761 2 - on signal ports
Power conductors Wire size Category <sup>7</sup>	0.34...2.5 mm <sup>2</sup> (22...12 AWG) solid or stranded copper wire rated at 75 °C (167 °F) or greater 1.2 mm (3/64 in.) insulation max 3 - on power ports
Terminal screw torque for cage-clamp terminal base	0.8 Nm (7 lb-in.)

<sup>7</sup> Use this category information for planning conductor routing as described in the Industrial Automation Wiring and Grounding Guidelines, Allen-Bradley publication 1770-4.1.

<sup>8</sup> Refer to the thermocouple manufacturer for proper thermocouple extension wire.

Parameter	Industry Standards
Certifications (when product is marked) <sup>9</sup> cULus	<p><b>UL</b> Listed for Class I, Division 2 Group A, B, C, D Hazardous Locations, certified for U.S. and Canada. See UL File E180101.</p>
	<p><b>UL</b> Listed Industrial Control Equipment, certified for U.S. and Canada. See UL File E140954.</p> <p><b>Ex</b> European Union 2014/34/EU</p> <p>ATEX Directive, compliant with:            EN 60079-7:2015+A1:2018; Potentially Explosive Atmospheres, Protection “ec” (Zone 2) II 3 G Ex ec IIC T4 Gc</p>
CCC	<p>EN 60079-0: ATEX General Requirements</p> <p>Certificate UL 20 ATEX 2409X</p> <p>GB/T3836.1-2021, GB/T3836.3-2021</p>
GBEx 2021312310000326	
GBEx 2021312310000345	
CE European Union 2014/30/EU EMC Directive, compliant with:	
UKCA	<p>EN 61000-6-4; Industrial Emissions</p> <p>EN 61000-6-2; Industrial Immunity</p>
EN 61131-2; Programmable Controllers(Clause 8, Zone A & B)	
UKCA	<p>Electromagnetic Compatibility Regulations 2016</p> <p>BS EN 61131-2, BS EN 61000-6-4, BS EN 61000-6-2</p>
Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016	
CMIM	<p>BS EN 60079-0, BS EN 60079-7</p> <p>Arrêté ministériel n° 6404-15 du 29 ramadan 1436 (16 juillet 2015)</p> <p>NM EN 61131-2, NM EN 61000-6-4, NM EN 61000-6-2</p>

<sup>9</sup> For the latest up-to-date information, see the Product Certification link at [www.spectrumcontrols.com](http://www.spectrumcontrols.com) for Declarations of Conformity, Certificates and other certification details.

# Index

- 1794-TB3G · 2-11
- 1794-TB3GS · 2-11
- A/D converter · 1-4
- Base Unit · 2-4
- block diagram · 1-5
- Broken Input Alarm · 3-19
- Broken Input Mode · 3-14
- CJC · 2-14, 3-14
- CJC Offset · 3-16
- Configuration · 3-7
- Conventions
  - used in the manual · vi
- Data Format · 1-2, 3-12
- Data Ranges · 3-12
- Deadband
  - User Alarm Deadband · 3-15
- Diagnostics · 3-19
- DIN Rail · 2-6
- Drilling Dimensions · 2-9
- EMC Directive · 2-1
- Ethernet Bridge
  - Local · 3-3
- Fault Mode · 3-10
- Filter Frequencies · 1-3
- Generic Profile · 3-2
- Hazardous Location · 2-2
- Input Data · 3-18
- Input Filter · 3-11
- Input Type · 1-1, 3-10
- Installation · 2-6
- key-switch · 1-4, 2-18
- LED
  - Module Status · 2-18
- Memory Map · 3-1
- Noise · 2-3
- Over Range · 3-18
- Panel/Wall Mounting · 2-8
- Power Requirements · 2-4
- power-up · 1-4
- Read
  - Input data · 3-16
- Remote Ethernet
  - Ethernet Flex Adapter · 3-4
- Slot Number · 3-8, 3-16
- Technical support
  - contact information · vi
- Temperature Units · 3-14
- Under Range · 3-18
- User High Alarm · 3-15, 3-19
- User Low Alarm · 3-14, 3-18
- Wiring · 2-11







©2019-2023, Spectrum Controls, Inc. All rights reserved. Specifications subject to change without notice. All product names, logos, brands, trademarks and registered trademarks are property of their respective owners.

**Corporate Headquarters**

Spectrum Controls Inc.  
1705 132nd Avenue NE, Bellevue, WA 98005 USA  
Fax: 425-641-9473  
**Tel: 425-746-9481**

**Web Site:** [www.spectrumcontrols.com](http://www.spectrumcontrols.com)  
**E-mail:** [spectrum@spectrumcontrols.com](mailto:spectrum@spectrumcontrols.com)

